

# PHILIPS

## Garment Steamer

### ClearTouch Air

2200W, AirStretch Technology  
ShoulderFit Hanger, Hang&Lock  
3 steam levels  
SmartFlow Gold steam plate



GC568/60

## Revive your delicate clothes with steam With innovative AirStretch technology

New ClearTouch Air garment steamer gives you better ironing results in one go, thanks to the innovative AirStretch technology and powerful steam. The suction gently stretches your clothes for safe and easy crease removal.

#### **Better ironing results**

- AirStretch technology for better ironing results in one go
- Extra powerful steam
- SmartFlow Gold steam plate for great results
- Pleats made easy with pleat making accessory

#### **More efficiency, less effort**

- ShoulderFit Hanger
- Unique Hang&Lock for stability during steaming
- 3 steam levels including ECO mode
- Detachable, transparent water tank with hygienic water inlet
- Easy Rinse descaling function
- Glove for extra protection during steaming
- Safe to use on delicate fabrics, like silk

#### **Refreshes clothes without washing or dry cleaning**

- Steam kills up to 99.9% of bacteria\*

# Highlights

## AirStretch Technology



Achieve better ironing results faster, with air suction. This innovative AirStretch technology uses adjustable suction force to gently pull and stretch the garment while keeping it close for deeper steam penetration. This combination helps you to achieve great ironing results with only one hand.

## SmartFlow Gold steam plate



SmartFlow technology ensures great ironing results as the optimized steam flow heats up the steam plate. This keeps the steam plate at an optimal, safe temperature for all fabrics while effectively preventing wet spots. It features a premium gold ceramic coating that enables better gliding, scratch and corrosion resistance.

## ShoulderFit Hanger




For easier ironing and improved results on shoulder parts, the smart 3D fabric pad provides a better fit for the garment and support while ironing. The 3D pad is removable so that you can use the hanger for different type of garments such as blouses, dresses, trousers and skirts.

## Hang&Lock



Unique Hang&Lock feature locks the garment hanger and enables stability for more convenient steaming - even with your own hanger.

## 3 steam levels

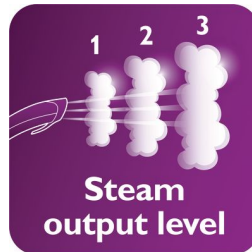

Set your preferred steam level for optimal results on different kinds of garments. The ECO mode lets you save energy without compromising on results.

## Detachable water tank



1.2 L detachable water tank with special water inlet for extra hygiene.

## Easy Rinse descaling function



Prolong the lifetime of your appliance by using the Easy Rinse descaling function regularly.

## Pleats made easy



Pleats made easy with pleat making accessory.

## Steam kills bacteria



Hot steam kills up to 99.9% of bacteria on clothes and helps delaying washing or dry cleaning\*.

## Extra powerful steam



Powerful steam is blown through the nozzles, enabling you to remove creases with only a few strokes.

## Glove for extra protection



Included is a glove that protects your hand during steaming.

# Specifications

## Easy to use

Power cord length: 1.6 m

Water tank capacity: 1200 ml

Hang&Lock

Detachable water tank

Refill any time during use

Safe on all ironable fabrics: Even delicates like silk

Soleplate name: SmartFlow Gold steam plate, XL steam plate

Special water inlet: For extra hygiene

Tap water suitable

## Accessories included

Garment hanger

Glove for extra protection

Pleat maker

ShoulderFit hanger

## Fast crease removal

Continuous steam: 42 g/min

Power: 2200 W

Ready to use: <1 min

Variable steam: 3 levels

Voltage: 240 V

## Scale management

Descaling and cleaning: Easy Rinse

## Size and weight

Packaging dimensions (WxHxL):

40x45x33.3 cm

Product dimensions (WxHxL): 33x182x33 cm

Total weight with packaging: 6.18 kg

Weight of iron: 4.24 kg

## Technology

AirStrech Technology

