

Philips PerfectCare
Performer
Steam generator iron

Max 6.5 bar pump pressure

Up to 450g steam boost
1.8 L water tank capacity
with detachable water tank

GC8755



Ultra-fast ironing

with powerful continuous steam

Philips PerfectCare Performer steam generator iron ensures a true simple, powerful, and no burn ironing experience. The powerful continuous steam penetrates deeply and continuously into the fibre to remove creases easily.

No temperature setting needed, guaranteed no burn

- Iron jeans to silk, no need to change temperature setting
- Safe to leave the hot soleplate on the ironing board

Fast ironing with continuous powerful steam

- Powerful steam for ultimate crease removal
- Integrated easy clean system for long-lasting performance
- Philips best gliding with increased scratch resistance
- Save energy with ECO mode

Extra convenience

- Lightweight steam generator for easier handling
- Large detachable water tank for easy refilling
- Safe and secure carry lock
- Automatic switch off for safety and energy saving
- Enjoy powerful ironing with minimum noise
- SoftGrip comfortable handle with ergonomic shape

PHILIPS

Highlights

OptimalTEMP technology



With OptimalTEMP technology you'll no longer have to waste time changing temperature settings, waiting for the temperature to adjust or pre-sorting clothes. Iron fabrics from jeans to silk, with guaranteed no burns thanks to the perfect combination of temperature and continuous powerful steam.

Safe rest



Innovative OptimalTEMP technology guarantees no burn on all ironable fabrics. As well as the reassurance this provides whilst ironing, it also means you can leave the hot iron soleplate directly on your cotton ironing board without causing any damage. This helps to reduce any discomfort to your wrists, as you won't need to lift the iron to and from its base as often.

Ultra powerful steam



An ultra-fast ironing experience can be yours with revolutionary technology. The powerful and continuous steam tackles even rough creases, and thicker fabrics are smoothed out with ease and speed. Plus there's an extra steam boost if needed, perfect for vertical steaming or stubborn creases.

Smart Calc clean




Regular descaling protects your iron and maintains steam performance. The Smart Calc-Clean system is an integrated descaling and cleaning function to extend the lifespan of your steam generator iron. The iron will remind you with both light and sound that cleaning and descaling is needed. Simply place your iron onto the Smart Calc-Clean container and start the process. It takes approx. 2 minutes for the dirty water and scale to be collected, your steam generator will beep once it's done and ready to use again.

SteamGlide Plus soleplate



The SteamGlide Plus soleplate is durable and non-stick is based on the ceramic finishing. It has an integrated titanium oxide layer for superior gliding performance.

Energy saving

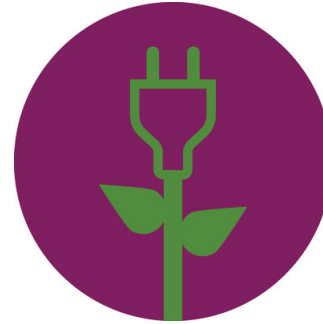

ECO mode allows you to save energy without compromising your ironing results. The ECO mode uses a reduced amount of steam, but still a sufficient amount to iron all your garments.

Lightweight steam generator



Thanks to revolutionary ProVelocity technology, we've been able to make a powerful steam generator iron that is much lighter than traditional models. This means it's more stable positioned on your ironing board and carrying it around is made much easier.

Steam generator iron

Max 6.5 bar pump pressure Up to 450g steam boost, 1.8 L water tank capacity, with detachable water tank

Specifications

Technology

- For all ironable fabrics
- No burns
- OptimalTEMP technology
- ProVelocity steam engine
- Smart Control Processor
- Quiet pump

Fast crease removal

- Continuous steam: Up to 120 g/min
- Power: 2600 W
- Pressure: Max 6.5 bar pump
- Ready to use: 2 min
- Steam boost: Up to 450 g
- Steam-on-demand
- Variable steam levels
- Vertical steam

Easy to use

- Safe on all ironable fabrics: Even delicates like silk
- Soleplate gliding performance: 5 stars
- Soleplate name: SteamGlide Plus
- Detachable water tank
- Hose length: 1.6 m
- Power cord length: 1.8 m
- Precision steam tip
- Ready to use: Light indicator, Sound indicator
- Refill any time during use
- Safety auto off

- Soft grip
- Soleplate scratch resistance: 4 stars

Scale management

- Descaling and cleaning: Smart Calc Clean
- Descaling reminder: Light, Sound, Yes

Storage

- Carry lock: For transportation and safety
- Cord storage: Velcro fix, Yes
- Hose storage: Hose storage compartment

Size and weight

- Packaging dimensions (WxHxL): 24.6 x 33.5 x 44.9 cm
- Product dimensions (WxHxL): 22 x 24 x 37 cm
- Weight of iron: 1.22 kg
- Weight of iron + base: 3.2 kg

Guarantee

- 2 year worldwide guarantee

Green efficiency

- Energy saving mode
- Product packaging: 100% recyclable
- User manual: 100% recycled paper

Design

- Color: Black copper



Issue date 2020-08-12

Version: 1.0.1

12 NC: 0000 041 04899
EAN: 87 10895 69991 4

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com