

PHILIPS

Saeco

Super-automatic
espresso machine

Syntia

Classic Milk Frother

Black Stainless Steel

HD8833/15



Live the pleasure of Italian espresso at home

compact and stylish bean-to-cup system

the perfect synthesis between compactness, performance, design and premium materials

Authentic Italian coffee perfection

- Delicious milk froth thanks to the classic milk frother
- Coffee without the wait thanks to the quick-heat boiler
- Coffee without burnt taste thanks to 100% ceramic grinders

Set the beverages to suit your taste

- Save your favourite coffee length and strength
- Play with the coffee's richness with our adjustable grinders
- Avoid heat loss and fit every cup with our adjustable spout

Easy to clean and maintain

- Always a clean machine thanks to auto-clean and descaling
- Easy cleaning thanks to removable brewing group
- Easy cleaning thanks to dishwasher-safe parts

Highlights

100% ceramic grinders



This espresso machine is equipped with 100% ceramic grinders. Saeco uses ceramic grinders because of their consistent grind without overheating the coffee bean, for an impeccable espresso. Ceramic also ensures long-lasting performance and totally silent operation.

Saves coffee length and strength



You will always get a perfect cup of espresso brewed according to your personal preference thanks to our memo function, which allows you to adjust the coffee length and strength to suit your taste. Enjoy a superb coffee drink in your favourite cup at the touch of a button.

5-step adjustable grinders



Different coffee blends require different levels of granularity for the full flavour to unfold. The grind granularity of this espresso machine can be adjusted in 5 settings, from the finest grind, for a full-bodied espresso, to the coarsest, for a lighter café crème.

Quick-heat boiler




The Saeco quick-heat boiler technology ensures your machine is always ready. Now you won't have to wait between brewing each espresso, but can prepare coffee after coffee.

Adjustable spout



The adjustable spout on our espresso machines will fit every cup and thus prevent the coffee splashing or cooling down while being poured into your cup. This way your espresso is always served at the right temperature, while the machine is kept clean.

Removable brewing group

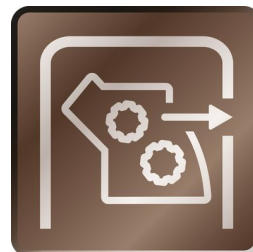

The brewing group, a Saeco invention, is the heart of our espresso machines, ensuring automation. The brewing group is, depending on the model, easily accessible from the front or side. It can be removed effortlessly for easy cleaning by rinsing under the tap, ensuring maximum hygiene.

Classic milk frother



This Saeco espresso machine comes with the classic milk frother, which baristas call "Pannarello". It dispenses steam and needs to be immersed in the milk to prepare gorgeous milk foam. Unleash your inner barista by preparing your delicious milk specialties the traditional way!

Dishwasher-safe parts



For your convenience, you can put the Saeco's drip tray and milk frother or milk carafe in the dishwasher. This will save time and ensure a hygienic clean.

Specifications

Perfect Espresso

Espresso technology: Saeco adapting system,
Aroma-system: pre-brewing

Multi-Beverage

Milk Variations: Pannarello: milk frothing

Easy to use

Cleaning and maintenance: Automatic coffee
circuit rinse

Usage: Adjustable coffee dispenser, Bypass for

grinded coffee, Frontal access to all functions,
Rapid steam, Removable brewing group,
Removable water tank

Technical data

Boiler: Stainless steel

Frequency: 50 Hz

Power: 1400 W

Voltage: 240 V

Pump Pressure: 15 Bar

Weight and dimensions

Maximum cup height: 110 mm

Product dimensions (L x D x H): 256 x 315 x
415 mm

Coffee bean capacity: 250 gr

Dump box capacity: 8 servings

Water tank capacity: 1.2 l

