

# PHILIPS

Steam generator  
iron

PerfectCare 7000  
Series

Max 7 bar pressure

Up to 450 g steam boost

1.8 L detachable water tank

Carry lock



PSG7014/16



## Fast and powerful with large detachable water tank

PerfectCare 7000 Series is designed for your comfort and convenience. Easy to handle with detachable water tank and powerful steam to achieve great results, faster. We guarantee no burns on all ironable garments thanks to OptimalTEMP.

### **OptimalTEMP technology, no settings required**

- Guaranteed no burns
- No settings to change

### **Fast and powerful**

- Powerful steam for ultimate crease removal
- Easy and efficient descaling system for lasting performance
- SteamGlide Advanced soleplate, ultimate gliding and durability

### **Extra convenience**

- Large 1.8 L detachable water tank for easy refilling
- Carry lock for safe and easy transport
- Automatic shut-off when iron is left unattended
- Light weight and comfortable iron to handle

# Highlights

## Guaranteed no burns



Even if you're multi-tasking or get distracted, you'll never burn your clothes. Thanks to our OptimalTEMP technology, we promise this steam generator iron will never burn any ironable fabric. You can even leave it resting face down on your clothes or ironing board. No burns, no shine. Guaranteed.

## No settings to change



Save a step in your weekly ironing routine. You won't need to separate fabrics or change settings and wait for the temperature to change any more. Thanks to OptimalTEMP, you iron everything from your denim jeans to delicate silks without adjusting the temperature. It does it all for you automatically and immediately.

## Ultra-powerful steam



When you need to tackle tough creases with ease, rely on our continuous steam to do the hard work for you. Watch those creases melt away when you use an extra boost of steam where you need it. And it's perfect when you want to steam vertical curtains or refresh hanging clothes.

## SteamGlide Advanced soleplate



Our superior SteamGlide Advanced soleplate delivers smooth gliding performance on any fabric. Its stainless steel base is twice as hard as aluminium, and our patented 6-layer coating with its advanced titanium layer effortlessly glides on any fabric for the fastest results.

## Lightweight iron



The iron is amazingly light and comfortable to handle, gliding easily and reducing wrist strain. Its minimal weight also makes it easy and effective for vertical steaming of curtains and hanging clothes.

## 1.8 l detachable water tank



1.8-litre transparent tank gives you up to 2 hours of continuous use. When the water tank is empty, you will be reminded by the indicator light and you can refill easily at any time under the tap through the large filling door.

## Easy De-calc




Regular descaling protects your iron, extends its lifetime and ensures the best steam performance. Our exclusive Easy De-Calc system collects limescale continuously with an indicator light to tell you when it needs emptying. Simply remove the plug and let the water and scale particles flow out.

## Safety carry lock



Lock your iron securely to the base station for easy carrying around the house and to reduce the risk of accidentally touching the hot soleplate.

## safe and easy auto shut-off

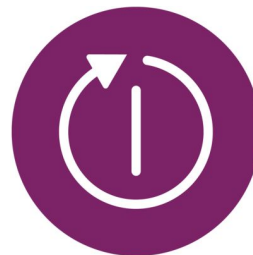

The automatic shut-off function automatically switches off your steam generator iron if it has not been used for a few minutes. This saves energy and gives you peace of mind.

# Specifications

## Technology

Cyclonic steam chamber  
For all ironable fabrics  
No burns  
No temperature settings needed  
OptimalTEMP technology

## Fast crease removal

Continuous steam: Up to 120 g/min  
Power: 2100 W  
Pressure: Max 7 bar  
Ready to use: 2 min  
Steam boost: Up to 450 g  
Steam-on-demand  
Vertical steam  
Voltage: 220-240 V

## Easy to use

Safe on all ironable fabrics: Even delicates like silk  
Soleplate gliding performance: 5 stars  
Soleplate name: SteamGlide Advanced  
Water tank capacity: 1800 ml

Cord freedom (swivel): 180 degree cord freedom

Detachable water tank  
Drip Stop  
Hose length: 1.7 m  
Power cord length: 1.65 m  
Ready to use: Light indicator  
Refill anytime during use  
Soleplate scratch resistance: 5 stars  
Heat-up time: 2 min  
Water low indicator

## Scale management

Descaling and cleaning: Easy De-calc  
Descaling reminder: Light

## Storage

Cord storage: Velcro fix

## Size and weight

Packaging dimensions (W x H x D): 31.5 x 31.5 x 47.5 cm  
Product dimensions (W x H x D): 24 x 27.5 x

42 cm

Total weight with packaging: 5.3 kg  
Weight of iron: 0.8 kg  
Weight of iron + base: 3.85 kg

## Guarantee

2 year worldwide guarantee

## Green efficiency

Energy saving\*: 20 %  
Product packaging: 100% recyclable  
User manual: 100% recycled paper

## Bazaarvoice\_DA\_GC\_PSG

PerfectCare 7000 Series: 7.0 bar\_1.8 L detachable water tank

## General specifications

Hose storage: Compartment  
Safety carry Lock  
Auto shut-off

