

PHILIPS

Steam iron

EasySpeed

Steam 35g/min;120g steam boost

Ceramic soleplate

Anti-calc

2300 Watts



GC2045/35



Fast, from start to finish

5 ways to speed up your ironing

This EasySpeed Plus iron speeds up your ironing thanks to: triple precision tip, even heat distribution across the soleplate, continuous steam, shot of steam and high power.

Easily removes creases

- Power up to 2300 W enabling constant high steam output
- Steam boost up to 120g
- Continuous steam output up to 35 g/min
- Ceramic soleplate for better gliding performance
- Vertical steam for crease removal in hanging fabrics

Longer lifetime

- Calc clean slider to easily remove scale out of your iron

Safe ironing

- Robust heelrest for improved stability

Comfortable ironing

- Heat-resistant storage box for easy storage
- Drip-stop system keeps your garments spotless while ironing
- Even steam distribution for efficient ironing

Highlights

Power up to 2300 W

Power up to 2300 W enables constant high steam output.

Steam boost

The iron's 120 g steam boost enables you to easily remove even the most stubborn creases.

Steam output up to 35 g/min



Continuous steam output of up to 35 g/min gives you the perfect amount of steam to efficiently remove all creases.

Ceramic soleplate



Ceramic soleplate is scratch resistant, glides well and easy to clean.

Vertical steam



This Philips iron has a vertical steam function, for crease removal in hanging fabrics.

Calc clean slider




This steam iron can be operated with normal tap water and the calc clean slider makes it easy to remove any built-up scale out of your iron. To maintain the performance of your Philips steam iron, you should use this scale clean function once a month when using normal tap water.

Robust heelrest

This iron features a specially designed extra large heelrest, which gives extra stability when it is put in vertical position.

Heat-resistant storage box

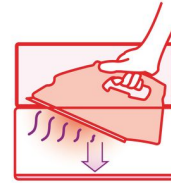

This heat-resistant storage box is designed for storing the hot iron easily. For optimal performance and longer lifetime of your box, always unplug the iron and empty the watertank before storing the iron in the box. When you put a hot iron in the box, the bottom of the box also becomes warm on the outside, but there is no risk of burning.

Drip stop system



Drip Stop system lets you iron delicate fabrics at low temperatures without having to worry about stains from water droplets.

Even steam distribution

Thanks to the carefully crafted soleplate design, the steam is distributed evenly across the soleplate. This way you need less strokes to evenly moisten the garment and therefore less time to complete the ironing.

Specifications

Fast & powerful crease removal

Soleplate: Ceramic soleplate
Continuous steam output: 35 g/min
Steam boost: 120 g
Vertical steaming
Spray
Power: 2300 W
Steam output

Easy to use

Water tank capacity: 270 ml
Drip stop
Reaching tricky areas: Triple precision tip

Calc management

Calc clean solution: Self clean

Comfortable ironing

Cord length: 1.8 m

