

# PHILIPS

Coffee maker

Daily Collection

With glass jug

Compact design (0.6L)

Black



HD7431/20



## Simply delicious coffee

With aroma twister for the best taste experience

Enjoy the taste and aroma of freshly brewed coffee with this Philips coffee maker. Its compact design is perfect for brewing 2 up to 7 cups. Thanks to the aroma twister, enjoy an optimal taste in each cup of coffee.

### Great taste and aroma


- Aroma twister circulates the coffee for an optimal taste

### Easy to experience

- Drip stop to pour a cup of coffee whenever you like
- Water level indication for easy filling
- LED power switch lights up when the coffee maker is switched
- Dishwasher-safe parts for easy cleaning
- Compact design perfect for 2-7 cups


# Highlights

## Drip stop

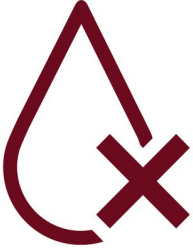


The drip stop allows you to pour a cup of coffee before the full brewing cycle is finished.

## LED power switch

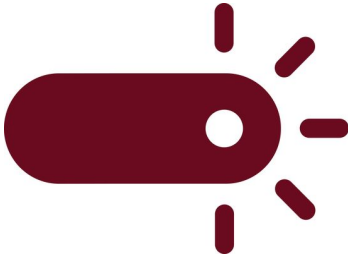


The red light on the switch button illuminates when the coffee maker is switched on.

## Aroma twister

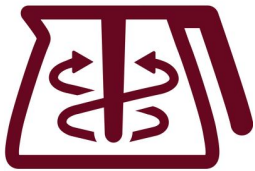


This smart nozzle inside the jug circulates the inflowing coffee evenly through the jug for an optimal and consistent aroma, from the first to the last cup.

## Dishwasher-safe parts

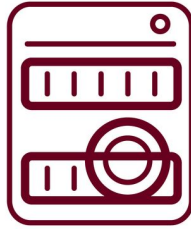

The jug and filter holder can be easily cleaned in the dishwasher.

## Compact design

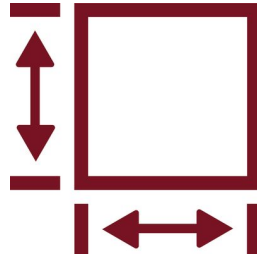

This coffee maker is especially designed for brewing 2 up to 7 cups of coffee (maximum 0,6 liter). Thanks to its very compact design, this coffee maker takes little place in your kitchen.

## Water level indication



Fill the water tank easily and precisely with the water level indication.

# Specifications

## Accessories

Included: Glass jug

## Design

Color: Black

## General specifications

**Ease of cleaning & maintenance:**

Dishwasher-safe parts, Removable filter holder

**Ease of use and comfort:** Water level indication, Drip stop

## Sustainability

Power consumption brewing: 700 W

## Technical specifications

Capacity water tank: 0.6 L

Cord length: 0.85 m

Frequency: 50/60 Hz

Voltage: 220 - 240 V

Brewing time for a jug: 10 min

## Weight and dimensions

Dimensions of packaging (WxDxH): 218 x 198 x 290 mm

Dimensions of product (WxDxH): 210 x 172 x 270 mm

Weight incl. packaging: 1.11 kg

Weight of product: 1.58 kg

