

# PHILIPS

## Steam iron

### Azur

100 g steam boost

2400 W

GC4430/38



## Power with precision

### Easy crease removal with Ionic DeepSteam

To provide easy removal of your toughest creases, this powerful steam iron with Ionic DeepSteam is what you need. Together with the SteamGlide soleplate, it gives you great gliding with powerful steam, reaching deep into the garment.

#### **Easily removes creases**

- Continuous steam output up to 40 g/min

#### **Easy gliding on all fabrics**

- SteamGlide soleplate is Philips premium soleplate

#### **Comfortable ironing**

- Double Active Calc System prevents scale build-up
- 100 g steam boost to remove stubborn creases easily

#### **Safe ironing**

- Electronic shut-off when iron is left unattended
- Drip-stop system keeps your garments spotless while ironing

#### **Ionic DeepSteam**

- Smaller steam particles reach deeper into toughest creases

# Highlights

## Auto shut-off



The electronic shut-off automatically switches the iron off when it is left unattended or tips over.

## Up to 40 g/min of steam



Philips steam iron with continuous steam output of up to 40 g/min gives you the perfect amount of steam to efficiently remove all creases.

## Double Active Calc System




Double Active Calc system of your Philips steam iron prevents scale build-up through anti scale pills and an easy to use calc clean function.

## Drip-stop system



The Drip Stop system of your Philips steam iron lets you iron delicate fabrics at low temperatures without having to worry about stains from water droplets.

## Ionic DeepSteam

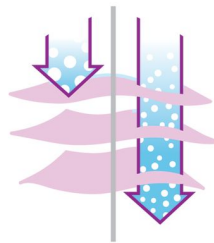

The ionization process creates smaller steam particles that reach deeper into the fabric. This means even the toughest creases are removed easily.

## Steam boost up to 100 g



Steam boost up to 100g for fast removal of even the most stubborn creases.

## SteamGlide soleplate



SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistancy, glides excellent and is easy to clean.

# Specifications

## Fast & powerful crease removal

Soleplate: SteamGlide  
Steam output  
Continuous steam output: 40 g/min  
Steam boost: 100 g  
Vertical steaming  
Variable steam settings  
Spray  
Steam tip  
Power: 2400 W

## Easy to use

Water tank capacity: 335 ml  
Filling and emptying water: Extra large filling hole  
Drip stop  
Safety auto off  
Power cord length: 3 m

## Calc management

Suitable for tap water  
Calc clean solution: Double active calc clean

## Technical specifications

Weight of iron: 1.55 kg  
Product dimensions: 30.3 x 12 x 15.2 cm  
Voltage: 220 – 240 V

