

# PHILIPS

## Saeco

Automatic espresso  
machine

Royal

Royal

One Touch

Cappuccino

HD8930/01



## Solid performance cup after cup

With large capacities and insulated milk container

The new Philips Saeco Royal HD8930/01 is the rejuvenation of a trusted classic. What remains unchanged is the extremely solid performance and the generous tanks for beans, water and coffee grounds.

### Easy to use

- Cup warmer
- Ergonomic in day-by-day operations
- Insulated milk container
- One touch beverage selection

### Easy to clean and maintain

- Automatic cleaning and de-scaling
- Dishwasher safe Cappuccinatore
- Easy cleaning stainless steel milk container

### Coffee specialty customization

- Adjustable coffee length and intensity

### High performance all day long

- Large capacity containers
- Double boiler for instant steam

# Highlights

## Adjustable coffee length and




Choose your favourite coffee blend and adjust coffee length and intensity (temperature, prebrewing, strength). Length: you can adjust the amount of brewed coffee according to your taste and/or the size of your cups. Temperature: the machine allows you to adjust via setting menu the temperature of your coffee. Prebrewing: you can adjust via setting menu the time of pre-wetting of the coffee powder into the infusion chamber, in order to extract all the taste. Strength: the machine is set-up for adjusting the strength with the amount of coffee to be ground, using the specific lever on the side.

## Autocleaning and de-scaling



Easy to use includes easy maintenance: Thanks to the automatic cleaning and de-scaling cycles, you are guaranteed perfect enjoyment every day and maximum longevity for your automatic espresso machine.

## Cup warmer

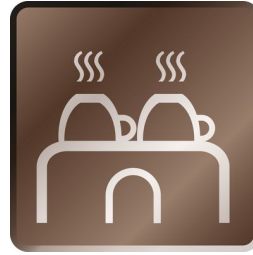

This feature allows you to not only store your cups and glasses right on the machine, it also pre-heats them letting the aroma unfold even better and guaranteeing a long-lasting crema

## Dishwasher safe Cappuccinatore



Dishwasher safe Cappuccinatore

## Double boiler



Optimal conditions for everything: two independent circuits assure quick and convenient coffee preparation directly after frothing your milk.

## Easy cleaning milk container



Easy cleaning stainless steel milk container

## Ergonomic day-by-day



Philips-Saeco is a synonym for convenience: refilling beans or water, emptying the coffee-dump box or the drip tray, all compartments are directly accessible.

## Insulated milk container



Insulated milk container

## Large capacity containers



Large capacity containers

## One touch beverage selection



One touch beverage selection

# Specifications

## Perfect Espresso

**Espresso technology:** Aroma-system: pre-brewing, Cup warmer

## Easy to use

**Cleaning and maintenance:** Automatic milk circuit rinse, Descaling cycle

**Usage:** Adjustable coffee dispenser, Instant steam (2 boilers), Removable brewing group

## Energy saving

**Energy saving:** Selectable Eco-mode

## Technical data

**Boiler:** Stainless steel

**Frequency:** 50 Hz

**Power:** 1400 W

**Voltage:** 230 V

**Pump Pressure:** 15 bar

## Weight and dimensions

**Product dimensions (L x D x H):**

336x380x450 mm

**Weight:** 15 kg

**Coffee bean capacity:** 350 gr

**Dump box capacity:** 20 servings

**Milk carafe capacity:** 0,5 l

**Water tank capacity:** 2,2 l

## Features

Simultaneous brewing

Hot water wand

## Design

**Colour:** Glossy Silver

**Materials and finishing:** Plastic Front/Top + Metal sides/rear

