

# PHILIPS

## Steam iron

### PerfectCare

2400 W

45 g/min continuous steam

180 g steam boost

SteamGlide Plus soleplate



GC3920/24



## Easier and faster without temperature settings 100% safe, even on delicate fabrics

Now you can iron everything from jeans to silk in one go with OptimalTEMP technology giving you the perfect combination of heat and steam – for faster crease removal with no risk of burn or shine marks.

### Carefree ironing, no temperature setting required

- OptimalTEMP technology, no temperature settings required
- Safe on all ironable garments, no-burns guaranteed

### Easy & fast ironing

- 2400 W to heat up quickly
- Steam output up to 45 g/min for strong, steady performance
- Up to 180 g steam boost blasts stubborn creases
- SteamGlide Plus soleplate for ultimate gliding performance

### Comfortable ironing

- Automatic shut-off when iron is left unattended
- Drip-stop keeps garments spotless while ironing
- Built-in calc-clean slider, long-lasting steam performance



[asimpleswitch.com](http://asimpleswitch.com)

# Highlights

## No temperature setting needed



Iron everything from silk to jeans without adjusting the temperature. Thanks to OptimalTEMP, no dial or settings are needed. So there's no more pre-sorting the laundry, or waiting for the iron to heat up and cool down. You're ready for any fabric, anytime.

## No burns – guaranteed



Thanks to OptimalTEMP technology, we guarantee this iron will never cause burns to any ironable fabric. You can even leave it resting face down on your clothes or ironing board. No burns, no shine. Guaranteed.

## 2400 W to heat up quickly



Delivers a fast warm-up and powerful performance.

## Continuous steam up to 45g/min



Strong and consistent steam output to remove creases faster.

## Steam boost up to 180 g




Penetrates deeper into fabrics to easily remove stubborn creases.

## SteamGlide Plus soleplate



Our exclusive SteamGlide Plus soleplate – with its advanced titanium layer and 6-layer coating – delivers ultimate gliding performance over any fabric. Non-stick, scratch-resistant and easy to keep clean.

## Automatic shut-off

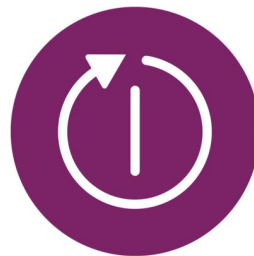

The iron shuts itself off if you leave it standing still. On its heel rest, soleplate or side, it will automatically switch off after 2 minutes.

## No more messy dripping



Our Drip Stop system lets you iron delicate fabrics at low temperatures with confidence. There's no need to worry about water droplets causing stains.

## Built-in calc-clean slider



This iron operates with ordinary tap water. Calc-clean is a built-in cleaning function to remove calcium buildup, or limescale, and maintain peak performance.



[asimpleswitch.com](https://www.asimpleswitch.com)

## Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

# Specifications

## Easy to use

Drip Stop  
Safety auto off  
Water tank capacity: 300 ml  
Extra large filling hole  
Extra stable heel rest  
Tap water suitable

## Fast crease removal

Water spray  
Continuous steam: 45 g/min  
Power: 2400 W  
Steam boost: 180 g

## Green efficiency

User manual: 100% recycled paper

## Guarantee

2 year worldwide guarantee

## Size and weight

Packaging dimensions (WxHxL):  
33.2x16.7x13.7 cm  
Product dimensions (WxHxL):  
31.2x14.7x12.7 cm  
Weight of iron: 1.485 kg

## Scale management

Descaling and cleaning: Built-in Calc Clean  
Slider

