

PHILIPS

Vacuum cleaner
with bag

Performer

2000W

FC9153/08



No other vac gives a more hygienic clean

Very high suction power

No other vacuum cleaner gives a more hygienic clean. The Performer combines very high suction power (425 W!) with an Ultra Clean Air HEPA filter and full-appliance HEPA seal, to offer thorough cleaning while keeping the air clean.

Superior cleaning

- 2000 Watt motor generating max. 425 Watt suction power

Traps dust and allergens inside

- Ultra Clean Air HEPA 13 filter, 99.95% filtration

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Highly efficient anti-allergy system


- ECARF Seal of Quality for trusted results

Long lasting dust pickup

- s-bag in XXL 4 liter capacity for long-lasting performance

Highlights

2000 Watt power, 425W

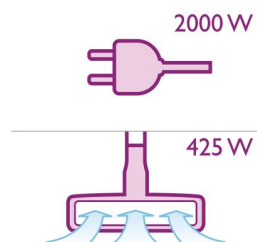

2000 Watt motor generating max. 425 Watt suction power

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has

maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

s-bag in XXL 4 liter



This large dust bag capacity allows you to make optimal use of your dust bag, which means you have to change your dust bag less frequently.

Design

Color: Ink Black

Filtration

Dust bag type: s-bag

Exhaust filter: Ultra Clean Air HEPA 13 filter

Number of dust bags included: 9

Dust capacity: 4 L

HEPA Air Seal

Nozzles and accessories

Accessories included: Brush, Crevice tool, Small nozzle

Accessory storage: On handgrip

Standard nozzle: TriActive nozzle

Performance

Airflow (max): 45 l/s

Input power (IEC): 1800 W

Input power (max): 2000 W

Noise level (Lc IEC): 76 dB

Suction power (max): 425 W

Vacuum (max): 33 kPa

Usability

Carrying handle: Top and front

Clean Comfort cassette

Tube coupling: Button

Dust full indicator

Power control: Electronic on appliance

Tube type: Metal lacquered 2-piece telescopic tube

Wheel type: Rubber

Action radius: 12 m

Cord length: 9 m

Weight and dimensions

Weight of product: 6.3 kg

Dimensions of product (LxWxH): 500 x 320 x 280 mm

