

# PHILIPS

Steam generator  
iron

PerfectCare Elite  
Plus

Up to 600g steam boost

1.8 L detachable water tank

OptimalTEMP Technology

Automatic & silent steam



GC9682/80



## The fastest, most powerful iron\* just got smarter With intelligent automatic steam

PerfectCare Elite Plus is the most powerful and fastest steam generator in the world, with ultra-light iron and intelligent automatic steam for ultimate convenience. No temperature settings is required and no burns – guaranteed.

### **No temperature setting needed, guaranteed no burn**

- OptimalTEMP technology, no temperature settings required
- No burns – guaranteed

### **Fast ironing with continuous powerful steam**

- Powerful steam for ultimate crease removal
- Intelligent automatic steam for faster, easier ironing
- Easy and efficient descaling system for lasting performance
- T-ionicGlide soleplate, ultimate gliding & durability
- Save energy with ECO mode

### **Ultimate ironing experience**

- Powerful ironing with minimum noise
- Light weight and comfortable iron to handle
- Carry lock for safe and easy transport
- Automatic shut off when iron is left unattended
- Large detachable water tank for easy refilling



[asimpleswitch.com](http://asimpleswitch.com)

# Highlights

## Ultra-powerful steam



Strong, continuous steam tackles even the thickest fabrics with ease. Watch stubborn creases melt away with an extra steam boost just where you need it. This extra steam is perfect for vertical steaming to refresh clothes and curtains, too.

## 1.8L detachable water tank




1.8-liter transparent tank gives you up to 2 hours of continuous use. When the water tank is empty, you will be reminded by the indicator light and you can refill easily at any time under the tap through the large filling door.

## No temperature setting needed



Iron everything from jeans to silk without adjusting the temperature. Thanks to OptimalTEMP, no dial or settings are needed. So there's no more pre-sorting the laundry, or waiting for the iron to heat up and cool down. You're ready for any fabric, anytime.

## No burns – guaranteed

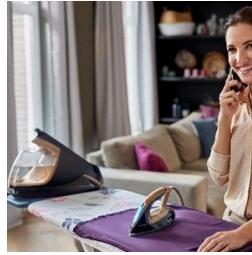

Thanks to OptimalTEMP technology, we guarantee this iron will never cause burns to any ironable fabric. You can even leave it resting face down on your clothes or ironing board. No burns, no shine. Guaranteed.

## T-ionicGlide soleplate



T-ionicGlide is our best soleplate for ultimate gliding performance and maximum scratch resistance. Its stainless steel base is twice as hard as a regular aluminum base, and our patented 6-layer coating with advanced titanium layer glides effortlessly for the fastest results.

## Intelligent automatic steam



Our DynamIQ smart sensor knows exactly when and how the iron is moving, delivering powerful steam where you need it most – for easier ironing and faster results.

## light weight iron



The iron is amazingly light and comfortable to handle, gliding easily and reducing wrist strain. Its minimal weight also makes it easy and effective for vertical steaming of curtains and hanging clothes.

## Easy De-Calc Plus



Regular descaling protects your iron, extends its lifetime, and ensures the best steam performance. Our exclusive Easy De-Calc Plus system collects limescale continuously with an indicator light and audio signal to tell you when it needs emptying. Simply remove the plug and let the water and scale particles flow out.



[asimpleswitch.com](https://www.asimpleswitch.com)

## Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

# Specifications

## Technology

Cyclonic steam chamber  
No burns  
No temperature settings needed  
OptimalTEMP technology  
Silent steam Technology  
Smart Control Processor  
DynamiQ

## Fast crease removal

Continuous steam: Up to 165 g/min  
Power: Max 2700 W  
Pressure: Max 8 bar  
Ready to use: 2 min  
Steam boost: Up to 600 g  
Vertical steam  
Voltage: 220-240 V

## Easy to use

Safe on all ironable fabrics: Even delicates like silk  
Soleplate gliding performance: 5 stars

Soleplate name: T-ionicGlide  
Water tank capacity: 1800 ml  
Detachable water tank  
Hose length: 1.9 m  
Low water alert  
Power cord length: 2 m  
Precision steam tip  
Ready to use: Sound indicator  
Refill any time during use  
Safety auto off  
Soleplate scratch resistance: 5 stars  
Tap water suitable

## Scale management

Descaling and cleaning: Easy De-calc Plus  
Descaling reminder: Light

## Storage

Carry lock: For transportation and safety  
Hose storage: Hose storage compartment

## Accessories included

Glove for extra protection

## Size and weight

Packaging dimensions (WxHxL): 31 x 35 x 51 cm  
Product dimensions (WxHxL): 23.3 x 28.5 x 45.3 cm  
Total weight with packaging: 7.4 kg  
Weight of iron: 0.8 kg  
Weight of iron + base: 5.1 kg

## Guarantee

2 year worldwide guarantee

## Green efficiency

Energy saving mode  
Energy saving\*: 50 %  
Product packaging: 100% recyclable  
User manual: 100% recycled paper

