



No other vac gives a more hygienic clean

Very high suction power

No other vacuum cleaner gives a more hygienic clean. The Performer combines the highest suction power ever (425 W!) with an Ultra Clean Air HEPA filter and full-appliance HEPA seal, to offer thorough cleaning while keeping the air clean.

Superior cleaning

· 2000 Watt motor generating max. 425 Watt suction power

Traps dust and allergens inside

· Ultra Clean Air HEPA 13 filter, 99.95% filtration

Highly efficient anti-allergy system

· ECARF Seal of Quality for trusted results

Long lasting dust pickup

• s-bag in XXL 4 liter capacity for long-lasting performance

Easy cleaning, even around furniture

TriActive nozzle with unique 3-in-1 action


Highlights

s-bag in XXL 4 liter



This large dust bag capacity allows you to make optimal use of your dust bag, which means you have to change your dust bag less frequently.

2000 Watt power, 425W

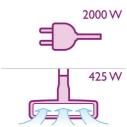

2000 Watt motor generating max. 425 Watt suction power

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Design

Color: Dark denim

Performance

Airflow (max): 45 l/s Input power (IEC): 1800 W Input power (max): 2000 W Noise level (Lc IEC): 76 dB Suction power (max): 425 W Vacuum (max): 33 kPa

Filtration

Dust bag type: s-bag

Exhaust filter: Ultra Clean Air HEPA 13 filter

Dust capacity: 4 L HEPA Air Seal

Usability

Tube type: Metal lacquered 2-piece

telescopic tube

Carrying handle: Top and front

Dust full indicator Clean Comfort cassette Tube coupling: Button

Park or storage assist: Back and bottom

Wheel type: Rubber

Power control: Electronic on appliance

Action radius: 12 m Cord length: 9 m

Nozzles and accessories

Standard nozzle: TriActive nozzle
Accessories included: Brush, Crevice tool,

Small nozzle

Accessory storage: On handgrip

Weight and dimensionsWeight of product: 6.3 kg

© 2019 Koninklijke Philips N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

Issue date 2019-03-15 Version: 3.0.1

