

PHILIPS

Hand blender

Avance Collection

800W, SpeedTouch with Turbo

ProMix Titanium Technology

2 times finer blending*

Up to 50% faster*



HR1670/90

ProMix
Titanium



Powerful and easy control handblender

Make a variety of foods your way with SpeedTouch

Powerful Philips handblender with 800 Watt motor power, Promix blending technology and SpeedTouch button for intuitive control: The more you squeeze, the more power. With this hand blender you make fresh food results the way you like it.

Best blending results in seconds

- Optimal food flow and blending performance
- Powerful 800W motor for great blending results

Versatile and multi-functional

- 1L ProMix Beaker for optimal blending, whisking and mixing

Reliable and durable

- Titanium coated blades: 6x harder than steel
- 2 year guarantee

Intuitive and easy to use


- SpeedTouch technology to intuitively set the right speed
- Anti-splash blade guard with special wave shape
- Ergonomically designed grip for secure and easy handling
- Single button release for easy assembly
- Dishwasher safe accessories to easily clean your product



asimpleswitch.com

Highlights

ProMix blending technology

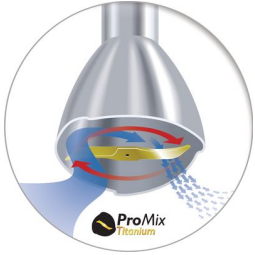

Developed together with the prestigious Stuttgart University, Philips ProMix is a unique, advanced technology that uses a specific triangular shape to create optimal food flow and maximum performance for faster and more consistent blending.

Powerful 800 Watt motor



Powerful and reliable 800W motor that can drive a large variety of accessories to allow processing of almost any ingredient and deliver great results during food preparation.

Titanium coated blade



Titanium layer coating (TiN) that makes the knife six times harder than a regular stainless steel knife and ensures great performance over time. Combined with optimized knife shape and unique ProMix triangular shape of the bar for the best blending results. It is food safe.

SpeedTouch with Turbo boost



Intuitive variable speed setting and turbo boost in one button that gives you more power as you squeeze. Start slowly to prevent splashing and smoothly speed up till you reach the required speed for each application and every type of ingredient. Prepare all your favorite recipes at the touch of a button.

Anti-splash blade guard



The special wave shape in the bottom part of the handblender blending bar guarantees no splashes or mess while you blend.

Ergonomic rubber grip



Ergonomic soft touch handgrip, designed to give a secure and safe grip which allows for easy holding and maneuvering of the hand blender during use.

Single-Button Release System



Simple, quick and easy attachment and detachment of the blending bar and all the accessories with the use of one finger.

Dishwasher safe

Dishwasher safe accessories to easily clean your product

2 year guarantee



With 2 years world-wide warranty.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Accessories

Included: Beaker

General specifications

Product features: Detachable shaft,
Dishwasher safe, Turbo function, Variable
speed

Service

2-year worldwide guarantee

Sustainability

Packaging: > 90% recycled materials
User manual: 100% recycled paper

Technical specifications

Cord length: 1.2 m
Frequency: 50/60 Hz
Power: 800 W
Voltage: 220-240 V
Capacity beaker: 1 L

Design

Color: Black

Finishing

Material accessories: SAN plastic
Material bar: Metal
Material blade: Titanium
Material of main body: ABS plastic

