

# PHILIPS

Bagless vacuum cleaner

PowerPro Active

1500 W

PowerCyclone 4

TriActive nozzle

Animal

FC8647/91



## Full performance

### Less energy consumption

The new Philips PowerPro Active vacuum cleaner delivers outstanding cleaning results thanks to the PowerCyclone 4 technology. The advanced dust container is easy to empty and helps avoiding dust clouds.

#### Excellent cleaning results

- PowerCyclone 4 technology separates dust and air in one go
- The TriActive nozzle applies 3 cleaning actions in one go

#### Easy to clean

- Advanced dust container design for easy to emptying

#### Clean air in your home


- EPA10 filter system with AirSeal for healthy air

#### Ergonomic grip for far reach

- Reach all corners thanks to the extra long ergonomic grip

# Highlights

## PowerCyclone 4 Technology

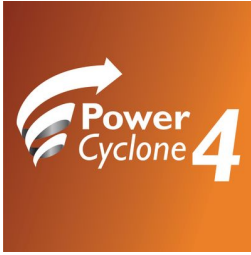

PowerCyclone 4 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber to separate the dust from the air.

## Easy to empty dust container



The dust container is perfectly designed to dispose dust without creating a dust cloud. Thanks to its unique shape and smooth surface, dust is collected at one side of the container and evenly glides into the dust bin.

## TriActive nozzle




The TriActive nozzle applies 3 cleaning actions in one go: 1) It gently opens the carpet with its specially designed soleplate to remove the dust deep down. 2) It sucks up big bits with its larger opening at the front. 3) It picks up the dust and dirt closely alongside furniture and walls with its left and right side air channels.

## EPA10 Clean air system



EPA10 filter and AirSeal capture the finest dust before the air is blown out for a dust-free environment and clean, healthy air.

## Extra long ergonomic grip

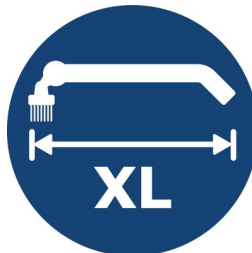

This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

# Specifications

## Performance

Airflow (max): 36.34 l/s  
Annual energy consumption: 51.8 kW·h  
Input power (IEC): 1400 W  
Input power (max): 1500 W  
Sound power level: 83 dB  
Vacuum (max): 16,8 kPa

## Usability

Action radius: 9 m  
Carrying handle: Top and front  
Cord length: 6 m  
Tube type: Metal 2-piece telescopic tube  
Wheel type: Rubber  
Tube coupling: Conical  
Power control: Electronic on appliance

## Design

Color: Star white

## Filtration

Dust capacity: 1.7 L  
Exhaust filter: Microfilter  
Motor filter: EPA 10 washable filter

## Nozzles and accessories

Accessories included: Crevice tool, Small nozzle  
Accessory storage: On tubeclip  
Additional nozzle: Full turbo brush  
Standard nozzle: TriActive nozzle

## Sustainability

Packaging: > 90% recycled materials  
User manual: 100% recycled paper

## Weight and dimensions

Dimensions of product (LxWxH): 473 x 304 x 301 mm  
Weight of product: 6 kg

