

PHILIPS

Bagless vacuum cleaner

1400 W

PowerCyclone 3

3 accessories

FC8087



Small on the outside, powerful on the inside

Compact vacuum cleaner

The compact Philips vacuum cleaner for powerful cleaning. Easy to store, carry and manoeuvre thanks to its light weight and small size. Easy-to-empty dust container helps to prevent dust clouds. Experience the freedom to move.

Extra reach for perfect cleaning results

- Reach all corners thanks to the extra-long ergonomic grip
- Crevice tool to help you to clean your furniture.

Easy to clean

- Easy-to-clean washable filter
- Advanced dust container design for hygienic emptying
- Extra handle for easy carrying with cord winder function

Compact design

- Lightweight and compact, giving you the freedom to move
- Small-sized appliance for compact storage

Good cleaning results

- PowerCyclone technology separates dust and air in one go
- 1400-Watt motor generating high suction power

Highlights

Easy-to-clean filter



Washable foam filter for life-long performance.

Easy to empty dust container



The dust container is carefully designed for disposing of collected dirt without creating a dust cloud. It is one-hand operated and, thanks to its unique shape and smooth surface, you can easily control the emptying of the dust container.

Extra-long ergonomic grip



This ergonomically shaped grip is convenient in use. Its extra-long design gives you further reach, so you can easily clean hard-to-reach places.

Small-sized appliance

Small-sized appliance for compact storage.

Crevice tool

Crevice tool to help you to clean your furniture.

1400-W motor




This vacuum cleaner has an efficient 1400-Watt motor generating high suction power for good cleaning results.

PowerCyclone technology



The PowerCyclone technology delivers the best cleaning results in one go through 3 highly efficient steps: 1) Air quickly enters into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber. 3) At the top of the cyclone, the exit blades effectively cut out the dust from the air.

Lightweight and compact

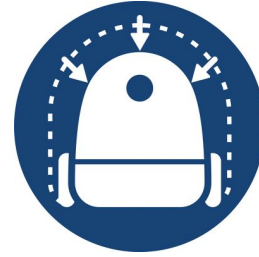

You can easily carry and roll the vacuum cleaner around when cleaning thanks to its light weight and small size.

Extra handle for easy carrying



Extra handle for easy carrying with cord winder function.

Specifications

Performance

Input power (IEC): 1200 W
Input power (max): 1400 W
Suction power (max): 200 W

Usability

Action radius: 7 m
Carrying handle: Top and front
Cord length: 4.5 m

Tube type: Plastic 2-P tube
Wheel type: Plastic
Tube coupling: Conical

Design

Colour: Deep black

Filtration

Dust capacity: 1.1 l
Exhaust filter: Foam filter
Motor filter: Micro filter

Nozzles and accessories

Accessories included: Crevice tool, Long bend tool
Standard nozzle: Hard and Soft Floor Nozzle

Sustainability

Packaging: > 90% recycled materials
User manual: 100% recycled paper

Weight and dimensions

Weight of product: 3.1 kg

