

Philips StudioPower Vacuum cleaner with bag with TriActive nozzle

# 2000W AirflowMax technology Parquet



# FC9083/01



# The great little performer

Big in power, compact in size

The StudioPower from Philips combines the performance of a big vacuum cleaner with the compactness of a small one. Its big power, small size, 2 handles, and large reach offer great flexibility, so you can quickly move through your home.

# **Excellent cleaning results**

• 2000 Watt motor generating max. 400 Watt suction power

# Easy to use all over the house

• Two comfortable carrying handles for extra convenience

## Highly efficient anti-allergy system

• HEPA AirSeal plus HEPA 13 filter

### Easy cleaning, even around furniture

• TriActive nozzle with unique 3-in-1 action

### **Scratch-protection for parquet floors**


• Parquet nozzle with soft brush hairs for scratch-protection






# Highlights

## 2000 Watt motor

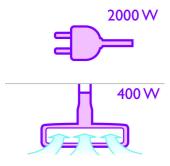


This powerful 2000 Watt motor generates max. 400 Watt suction power for excellent cleaning results.

### Comfortable carrying handles

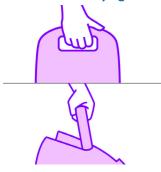

This vacuum cleaner has not one, but two carrying handles. When it is on its wheels, there is a handle on top which enables you to easily move the cleaner around with very little bending. The second handle on the front side of the appliance enables you to comfortably carry it around in an upright position.


### HEPA AirSeal, HEPA 13 filter



# HEPA AirSeal & HEPA 13 filter


This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.

### Parquet nozzle

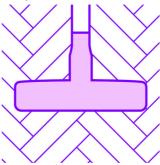

No more risk of scratches thanks to this nozzle with soft brush hairs, especially designed to carefully clean your hard floors.

### 11 m reach

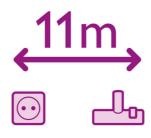

Thanks to its 8 m cord you have an 11 m reach without having to switch the plug.

# Specifications

### Design

· Color: Pistel red

### **Filtration**

- Dust bag type: s-bag
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter
- Dust capacity: 3 l
- HEPA Air Seal

#### **Nozzles and accessories**

- Accessories included: Crevice tool
- · Accessory storage: On handgrip
- · Additional nozzle: Parquet nozzle
- Standard nozzle: TriActive nozzle

### **Performance**

- Airflow (max): 40 l/s
- Input power (IEC): 1800 W
- Input power (max): 2000 W
- Noise level (Lc IEC): 78 dB
- Suction power (max): 400 W
- · Vacuum (max): 30 kPa

#### **Usability**

- · Carrying handle: Top and front
- Clean Comfort cassette
- Tube coupling: Button
- Dust full indicator
- Power control: Electronic on appliance
- Tube type: Metal 2-piece telescopic tube
- · Wheel type: Rubber
- Action radius: 11 m
- · Cord length: 8 m

### Weight and dimensions

- Dimensions of product (LxWxH): 450 x 240 x 240 mm
- Weight of product: 6 kg



Issue date 2015-08-18

Version: 2.0.1

© 2015 Koninklijke Philips N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.