

# PHILIPS

Vacuum cleaner  
with bag

PerformerPro

Eco

AirflowMax technology

HEPA 13 filter

FC9195/01



## Highest suction power, even as the bag fills up\* with AirflowMax technology

With its powerful, energy efficient motor and AirflowMax technology, Philips PerformerPro vacuum cleaner maintains a very high airflow, giving you the highest suction power. For great cleaning results, even as the bag fills up!

### Excellent cleaning results

- Energy efficient motor for high-power results
- Revolutionary Airflow Max technology for extreme suction
- 5L dust capacity for longer cleaning
- New 3-in-1 TriActiveMax nozzle maximizes dust pick-up

### Integrated Anti-Allergy system


- HEPA AirSeal with HEPA 13 filter retains 99.99% of dust
- Allergy friendly quality tested by ECARF
- s-bag Ultra Long Performance captures even more fine dust

### Convenience

- Long reach for convenient cleaning
- 360Flex hose swivel for smooth maneuvering
- SmartLock coupling to easily adjust to each cleaning task
- Extra long grip with air slide for farther reach

# Highlights

## Energy efficient motor

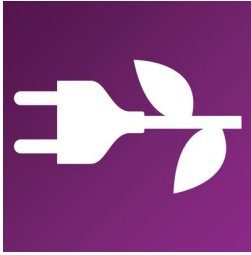

Highly efficient motor generates 350 Watt max. suction power. It's optimized design uses 30% less energy, while providing high suction power.

## Airflow Max technology



Airflow Max technology maximizes the airflow, allowing the dustbag to unfold uniformly, so you get the highest suction power, even as the bag fills-up!

## 5L dust capacity



The specially designed 5L dust chamber allows you to make optimal use of your dust bag, so you can clean for longer.

## TriActiveMax nozzle



TriActiveMax nozzle with 3-in-1 cleaning actions perfectly seals to the floor to maximize dust pick-up. 1) It gently opens the carpet with its specially designed soleplate to remove the dust deep down. 2) It sucks up big bits with its larger opening at the front 3) It sweeps up the dust and dirt closely alongside furniture and walls with its two side brushes.

## HEPA AirSeal with HEPA 13



HEPA 13 filter and AirSeal capture even the finest dust before the air is blown out for a dust-free environment and clean, allergen free air. The exhaust air is even cleaner than the air in the room.

## ECARF certified




This vacuum cleaner with HEPA 13 filtration is certified as Allergy friendly by the European Centre for Allergy Research Foundation. The HEPA 13 filter purifies the exhaust air up to 99,95% of allergens from; cat & dog hairs, dust mites or pollen to support an allergy friendly home environment.

## s-bag Ultra Long Performance



The Philips s-bag Ultra Long Performance made of five layers of high quality, non-clogging material captures even the finest dust. This excellent filtration gives you a better cleaning result and clean air in your home. The multilayer filtration also maintains the vacuum cleaners high suction power during the entire lifetime of the bag. The s-bag ULP has been tested and certified by the independent test institute TÜV Rheinland Group, proven to last up to 80% longer than a standard dustbag.

## Long reach

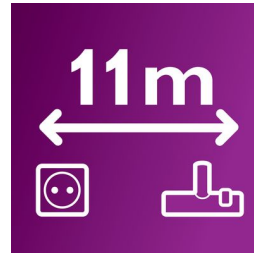

11 m reach allows you to clean a larger surface without having to switch the plug.

## SmartLock coupling



The unique Philips SmartLock coupling on nozzles and the telescopic tube easily connects, and disconnects, these parts during cleaning. The SmartLock coupling intuitively allows you to adjust the telescopic tube to your preferred height.

# Specifications

## Performance

Input power (IEC): 1150 W  
Input power (max): 1150 W  
Noise level (Lc IEC): 79 dB  
Suction power (max): 380 W  
Airflow (max): 43 l/s  
Vacuum (max): 30 kPa

## Usability

Tube type: Metal 2-piece telescopic tube  
Handgrip: Ergonomic grip with air slider  
Tube coupling: SmartLock  
Carrying handle: Top and front  
Park or storage assist: Vertical and horizontal  
Power control: Electronic on appliance

Wheel type: Rubber  
Action radius: 11 m  
Cord length: 8 m  
Dust full indicator

## Design

Color: Deep black

## Filtration

Dust bag type: s-bag Ultra Long Performance  
Exhaust filter: Ultra Clean Air HEPA 13 filter  
Motor filter: Triple layer  
Dust capacity: 5 L  
HEPA Air Seal

## Nozzles and accessories

Accessories included: Brush, 2-in-1 brush/small nozzle, Crevice tool  
Accessory storage: On tubeclip  
Standard nozzle: TriActiveMax nozzle

## Weight and dimensions

Dimensions of product (LxWxH): 500 x 310 x 300 mm  
Weight of product: 5.0 kg

