

PHILIPS

Bagless water filtration
vacuum cleaner

AquaAction

2000W

AquaWeb water filtration

HEPA 13 washable filter



FC8950



3x clean with the power of water

Clean floors, clean air, clean hands

The new Philips AquaAction with AquaWeb water filtration technology combines a powerful cleaning performance and efficient anti-allergy system with an easy to clean experience. Let the water do the work, without getting your hands dirty.

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Powerful cleaning performance

- 2000 Watt motor for powerful cleaning performance
- Trap dust with AquaWeb water filtration technology

Fresh and clean air in your home

- Ultra Clean Air HEPA 13 filter with 99.95% filtration
- Effective with/without non-foaming soap or perfume

Keep your hands clean

- Advanced AquaWeb filter design to keep your hands clean
- Bucket handle to keep your hands clean

Highlights

TriActive nozzle


The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

2000 Watt motor



The 2000 Watt motor generates max. 220 Watt suction power for powerful cleaning performance.

AquaWeb technology

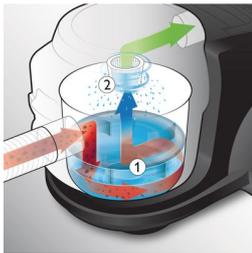

AquaWeb water filtration technology delivers a powerful cleaning performance through two highly efficient steps: 1) The AquaWeb filter has two layers of blades, which create a very

dense web of water droplets. When the dirty air passes through this web, the water droplets capture the dust and will not release it again. 2) The active separator effectively separates the clean air and dirty water, ensuring that only clean air will leave the vacuum cleaner.

Bucket handle



The bucket is designed to keep your hands clean, thanks to the external handle. This external handle facilitates both easy carrying and easy pouring, so you can empty the bucket without getting your hands dirty.

Ultra Clean Air HEPA 13 filter




The Ultra Clean Air HEPA 13 filter captures at least 99.95% of all dust, ensuring a clean & allergen-free environment.

Advanced AquaWeb filter design



With its advanced shape, the AquaWeb filter is designed to keep your hands clean. Thanks to the integrated handle, you can easily remove the filter from the bucket, and rinse it under the tap without getting your hands dirty.

Non-foaming soap or perfume

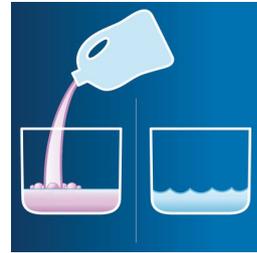

Non foaming soap or perfume can be added to the water to ensure a fresh environment.

Specifications

Performance

Input power (IEC): 1700 W
Airflow (max): 25 l/s
Input power (max): 2000 W
Suction power (max): 220 W
Vacuum (max): 25 kPa
Noise level (Lc IEC): 87 dB

Design

Color: Juicy red

Filtration

Dust capacity: 5.8 L
Exhaust filter: Ultra Clean Air HEPA 13 washable filter

Usability

Action radius: 11 m
Cord length: 8 m
Tube type: Metal 2-piece telescopic tube
Tube coupling: Easy release
Park or storage assist: Back
Wheel type: Rubber

Nozzles and accessories

Standard nozzle: TriActive nozzle
Accessories included: Crevice tool, Small nozzle

Weight and dimensions

Weight of product: 7.5 kg
Dimensions of product (LxWxH): 500 x 330 x 290 mm

