

PHILIPS

Bagless vacuum cleaner

EasySpeed

1600W

Microfilter

1,4L



FC5228/61



Tough on dust, Easy on you

Compact and Powerful

The new Philips EasySpeed vacuum cleaner will make cleaning easier for you. Easy to carry, maneuver, store and powerful. Easy to empty dust container helps avoiding dust clouds. You can enjoy better cleaning results in an easy way

Powerful cleaning performance

- PowerCyclone 5 technology separates dust and air in one go
- 1600 Watt motor for high performance

Easy to clean

- Advanced dust container design for hygienic emptying
- Extra handle for easy carrying
- Easy to clean washable filter

Extra reach for perfect cleaning results

- Crevice tool and small nozzle
- Reach all corners thanks to the extra long ergonomic grip

Compact design

- Light weight and compact, giving you the freedom to move
- Small sized appliance for compact storage



asimpleswitch.com

Highlights

PowerCyclone 5 Technology



PowerCyclone 5 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the air inlet design. 2) The curved airpass quickly accelerates the air in the cyclonic chamber to separate the dust from the air. 3) The optimized exit blades separate dirt from the cyclone and into the dust bucket.

Extra long ergonomic grip




This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

Crevice tool and small nozzle



Small nozzle and crevice tool help you to clean your furniture.

Easy to clean filter

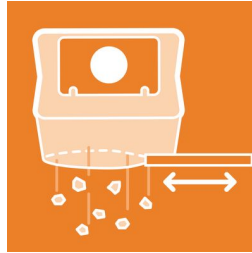

Washable foam filter for life-long performance.

Easy to empty dust container



The dust container is carefully designed to dispose collected dirt without creating a dust cloud. It is one-hand operated and thanks to its unique shape and smooth surface, you can easily control the emptying of the dust container.

Easy Carrying




Extra handle for easy carrying.

Light weight and compact



You can easily carry and roll the vacuum cleaner around when cleaning thanks to its light weight and small size.

Small in size

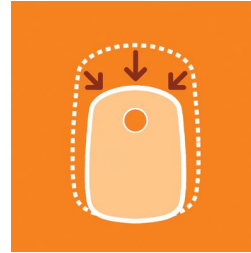

Thanks to its small size the appliance can easily be stored, saving valuable space.

1600 Watt motor



1600 Watt motor for high performance



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Design

Color: Bright Pink

Performance

Input power (max): 1600 W

Input power (IEC): 1400 W

Filtration

Dust capacity: 0.5 L

Exhaust filter: Microfilter

Motor filter: Washable filter

Usability

Action radius: 8 m

Cord length: 5 m

Tube type: Plastic 2-P tube

Carrying handle: Top and front

Tube coupling: Conical

Wheel type: Plastic

Nozzles and accessories

Standard nozzle: Hard and Soft Floor Nozzle

Accessories included: Crevice tool, Small nozzle

Accessory storage: On tubeclip

Sustainability

Packaging: > 90% recycled materials

User manual: 100% recycled paper

Weight and dimensions

Weight of product: 5 kg

