

Philips 8500 series  
Pressurised steam  
generator

1.6 L  
AUTO CORD

GC8560



## Great results, minimum effort

### Iron without compromise

Powerful yet surprisingly convenient iron. This Philips ironing system produces continuous steam with high pressure. The large detachable watertank you can refill at any time and anywhere, making ironing fast and easy.

#### **Fast and powerful ironing**

- Continuous steam up to 120 g/min
- Up to 5 bars of steam pressure for fast ironing
- Steam boost up to 200 g for tough wrinkle removal

#### **Comfortable ironing**

- Ergonomically and lightweight 1.2kg iron

#### **Easy to use**

- Easy one touch cord storage- just press the button
- Detachable 1.6 L watertank

#### **Save energy consumption**

- Save 20% energy and 40% water consumption

#### **Hassle-free scale removal**

- Permanent anti-calc tablets inside delay scale build up
- Easy rinsing without accessories

# PHILIPS

# Highlights

## Up to 5 bar




Double your ironing speed with pressurized steam. The pressurized steam from your Philips iron penetrates deep into fabrics, making your ironing fast and easy, even on difficult fabrics.

## Continuous steam up to 120 g/m



The Philips iron has a continuous steam output up to 120 g/min thanks to the small amounts of water that are pumped into the boiler each time. For perfect and fast crease removal.

## Ergonomic iron

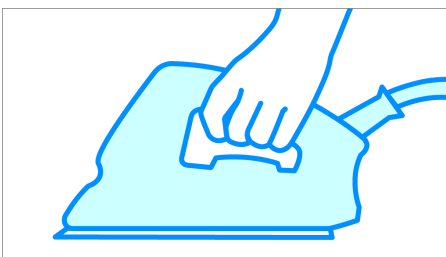

The ergonomic design of the iron facilitates comfortable ironing by putting less strain on the wrist. The upward sloping handle ensures a natural position reducing strain during ironing. The iron design also prevents the


repetitive movements caused by placing an iron on its heel. The iron is light (1.2kg) for an easy & comfortable ironing experience.

## Automatic cord winder




Thanks to the automatic cord winder, you can just press the button to automatically retract the powercord.

## Detachable 1.6 L watertank

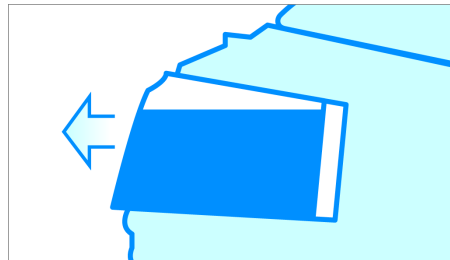

A large watertank capacity enables you to iron with steam without having to refill. The tank can hold a large amount of water so you can iron up to 3 hours uninterrupted. Being detachable, you can easily re-fill the tank any time. It gives you endless, powerful steam.

## Anti-calc Tablets

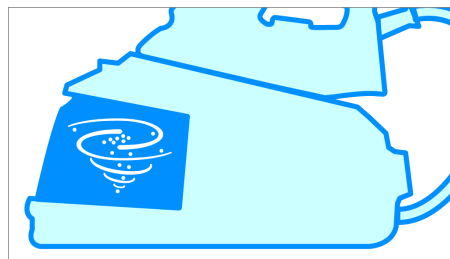

Permanent anti-calc tablets delay the formation of scale build up ensuring better protection for your system iron

## Easy Rinsing

In order to improve the lifetime of your system iron we recommend to rinse the inside of your system base. This has been made easily accessible with the easy rinse knob. You don't need any accessories to rinse your system iron.

## Steam boost up to 200 g



Steam boost enables you to easily remove even the most stubborn creases.

## Eco-setting



Save 20% energy and 40% water consumption by selecting the eco-setting on your Philips Iron. The eco-setting offers the most energy efficient way to obtain perfect ironing results.

# Specifications

## Fast & powerful crease removal

- Soleplate: SteamGlide
- Continuous steam output
- Continuous steam output: 120 g/min
- Steam boost: 200 g
- Vertical steam
- Steam pressure: Up to 5 bar
- Variable steam settings
- Steam tip
- Power: 2200 W

## Easy to use

- Water tank capacity: 1600 ml
- Filling and emptying water: Detachable water tank
- Refill any time
- Heat-up time: 2 min
- Storage solution: Carry lock
- Hose storage: Hose clip

- Cord storage: Automatic cord winder
- Power cord length: 1.8 m
- Cord freedom (swivel): 180 degree cord freedom
- Hose length: 1.9 m

## Sustainability

- Automatic energy saving: 20% energy reduction

## Calc management

- Suitable for tap water
- Calc clean solution: Anti-calc tablets + rinsing
- Calc clean reminder

## Technical specifications

- Voltage: 220 - 240 V
- Weight of iron: 1.2 kg
- Weight of iron + base: 5.5 kg



Issue date 2017-12-15

Version: 5.0.1

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)