

PHILIPS

Steam iron

PerfectCare Azur

Steam 45g/min; 180g steam boost

SteamGlide Plus soleplate

Safety Auto off + Anti-calc

Safe for all ironable garments



GC4910/10



Carefree ironing, no setting required

Ironing perfected

Iron any ironable garment from silk, to linen, to cotton, to cashmere; in any order without adjusting the temperature. PerfectCare Azur delivers perfect results without the risk of burn or shine. Ironing is now simpler than ever.

One perfect setting for all your clothes

- OptimalTemp technology: perfect combination of temperature
- 100% safe on all ironable garments
- 100% fast on all fabrics, no other steam iron is faster
- 100% easy to use, no adjustment required
- Tested and approved by independent textile experts

Comfortable ironing

- SteamGlide Plus: perfect mix between gliding and stretching
- Suitable for tap water with Double Active Calc Clean system
- Iron switches off automatically when left unattended
- Quattro Precision Tip for an easy reach in tricky areas
- Iron with smart light feedback indicator

Fast and powerful ironing

- 2400 W iron for fast heat up and powerful performance
- Steam output of up to 45 g/min for better crease removal



asimpleswitch.com

Highlights

OptimalTemp technology



The latest revolution in ironing to deliver the perfect combination of steam and temperature. It's made to ensure you with speedy ironing, great results on tough creases, no setting required and safe on all ironable fabrics. The perfect combination of steam and temperature because: 1) Smart Control Processor setting the right temperature 2) HeatFlow technology enabling an even steam and temperature balance.

100% safe



100% safe on all fabrics even the most delicate like silk, cashmere, wool, polyester. Independent iron testing institutes have used PerfectCare on the most sensitive ironable garments and they confirmed the excellence of ironing results.

100% fast

100% fast to iron, no sorting required. Iron all your garments with more effective steam.

100% easy to use



100% easy to use, no adjustment required. You can now iron all ironable garments one after the other, without having to wait or to adjust the iron's temperature dial.

Tested and approved:



This iron is tested and approved by independent textile experts institutes for its excellent ironing performance, such as DWI, IWTO, Woolmark. The Woolmark Apparel Care program helps consumers identify quality laundry products that are approved by The Woolmark Company for use on wool products. Philips with its exclusive OptimalTEMP technology has been so far the only brand able to be certified with the Gold standard from Woolmark. You can be confident that the Woolmark-approved apparel care products are ideally suited for any wool garments.

SteamGlide Plus soleplate




For the best results you need a soleplate that has the optimal balance between gliding and stretching. This is offered through SteamGlide Plus with its easy glide zone and perfect stretch zone.

Suitable for tap water



PerfectCare Azur steam iron is designed to be used with tap water. Double Active Calc Clean: A smart combination of Calc Pills and a regular Self Clean reduce the scale built-up. For better ironing results we recommend to use demineralized water. This ensures a consistent steam flow from your iron.

Safety auto off

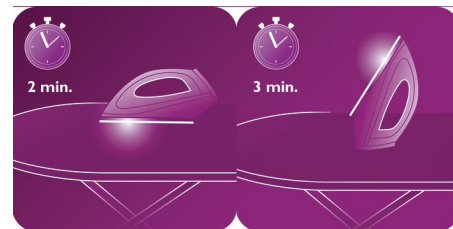

The iron shuts off automatically when left unattended. If left on it's heelrest the steam iron will switch off in 3 minutes, when left resting on the soleplate it will take 2 minutes before the iron shuts off.



[asimpleswitch.com](https://www.asimpleswitch.com)

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Fast & powerful crease removal

Soleplate: SteamGlide Plus

OptimalTEMP technology

Continuous steam output: Up to 45 g/min

Steam boost: 180 g

Power: 2400 W

Spray

Comfortable ironing

Cord length: 2.5 m

Easy to use

Water tank capacity: 350 ml

Drip stop

Safety auto off

Cord storage: Cord clip

Cord freedom (swivel): 180 degree cord freedom

Fast and easy filling

Power cord length: 2.5 m

Sustainability

Energy saving: 10% energy reduction

Calc management

Suitable for tap water

Calc clean solution: Double active calc clean

Technical specifications

Weight of iron: 1.75 kg

