

# PHILIPS

Bagless vacuum cleaner

1400 W

PowerCyclone 3

3 accessories

FC8087/01



## Small on the outside, powerful on the inside

### Compact vacuum cleaner

The compact Philips vacuum cleaner for powerful cleaning. Easy to store, carry and maneuver thanks to its light weight and small size. Easy to empty dust container helps avoiding dust clouds. Experience the freedom to move.

#### Extra reach for perfect cleaning results

- Reach all corners thanks to the extra long ergonomic grip
- Crevice tool help you to clean your furniture.

#### Easy to clean

- Easy to clean washable filter
- Advanced dust container design for hygienic emptying
- Extra handle for easy carrying with cord winder function

#### Compact design

- Light weight and compact, giving you the freedom to move
- Small sized appliance for compact storage

#### Good cleaning results

- PowerCyclone technology separates dust and air in one go
- 1400 Watt motor generating high suction power

# Highlights

## PowerCyclone technology



The PowerCyclone technology delivers best cleaning results in one go through 3 highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber. 3) At the top of the cyclone, the exit blades effectively cut out the dust from the air.

## Crevice tool


Crevice tool help you to clean your furniture.

## Easy to clean filter



Washable foam filter for life-long performance.

## Extra long ergonomic grip

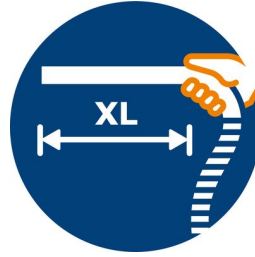

This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

## 1400 W motor



This vacuum cleaner has an efficient 1400 Watt motor generating high suction power for good cleaning results.


## Easy to empty dust container



The dust container is carefully designed to dispose collected dirt without creating a dust cloud. It is one-hand operated and thanks to its

unique shape and smooth surface, you can easily control the emptying of the dust container.

## Light weight and compact

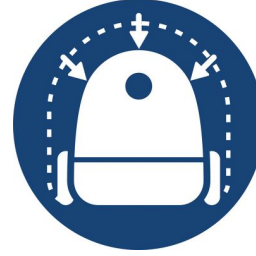

You can easily carry and roll the vacuum cleaner around when cleaning thanks to its light weight and small size.

## Small sized appliance

Small sized appliance for compact storage.

## Extra handle for easy carrying



Extra handle for easy carrying with cord winder function.

# Specifications

## Performance

Input power (IEC): 1200 W  
Input power (max): 1400 W  
Suction power (max): 200 W

## Usability

Action radius: 7 m  
Carrying handle: Top and front  
Cord length: 4.5 m

Tube type: Plastic 2-P tube  
Wheel type: Plastic  
Tube coupling: Conical

## Design

Color: Deep black

## Filtration

Dust capacity: 1.1 L  
Exhaust filter: Foam filter  
Motor filter: Microfilter

## Nozzles and accessories

Accessories included: Crevice tool, Long bend tool  
Standard nozzle: Hard and Soft Floor Nozzle

## Sustainability

Packaging: > 90% recycled materials  
User manual: 100% recycled paper

## Weight and dimensions

Weight of product: 3.1 kg

