

PHILIPS

2-in-1 handstick

PowerPro Duo

2-in-1

18 V

Bagless

2 accessories

FC6168/01



Thorough cleaning results on all floors

With PowerCyclone and TriActive Turbo nozzle

The new Philips PowerPro Duo offers you thorough cleaning result on hard-floors and carpets. PowerCyclone Technology maintains high suction power for excellent performance. The TriActive Turbo nozzle captures more dust and fluff in one go.

Thorough cleaning results

- PowerCyclone Technology for maximum performance
- TriActive Turbo nozzle for powerful performance on carpets
- Powerful 18V Lithium batteries for long runtime

2-in-1 cordless all-rounder

- Cordless operation for freedom to clean everywhere
- Self-standing position for instant parking anywhere
- The nozzle's motorized brush thoroughly removes pet hair
- 2-in-1 functionality for cleaning floors and furniture
- Maximum flexibility to clean difficult areas

Easy to clean

- One-step empty dust bucket, simple and hygienic
- 3 layer filter technology captures micro particles




Highlights

PowerCyclone Technology



The PowerCyclone technology delivers thorough cleaning results in one go through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air in the cyclonic chamber to separate the dust from the air.

TriActive Turbo nozzle

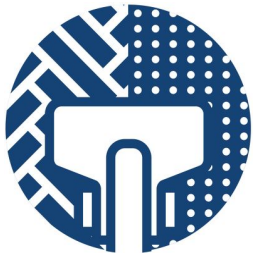


The TriActive Turbo nozzle delivers powerful performance on hard floors and carpets. The motorized brush and the optimized airflow pick up all dirt and fluff in one go.

Powerful 18V Lithium




The powerful 18V Lithium-Ion batteries have longer-lasting power versus standard batteries. Li-Ion batteries are also very lightweight, giving you a more enjoyable cleaning experience.

Cordless operation

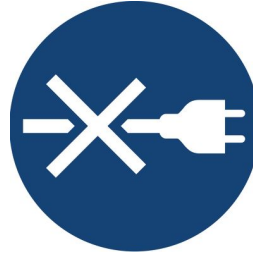

The rechargeable batteries for cordless operation gives you freedom to clean everywhere. Now the cable is not a barrier anymore and you can easily clean in different rooms with no hassle.

Self-standing parking position

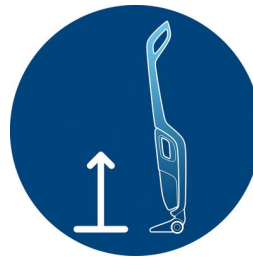

The stick has a convenient parking position to stay upright, both with and without the handheld. Therefore, you can instantly park the stick anywhere you want, also while you are cleaning.

Effective on Animal Hair



Thanks to the TriActive Turbo nozzle with a motorized brush, you can now remove animal hair from couches, cushions and other fabrics. Ideal for pet owners.

2-in-1: stick & handheld



The 2-in-1 functionality gives you both a stick and a handheld vacuum cleaner in one, to easily clean both floor and furniture.

Maximum flexibility



PowerPro Duo is designed to reach everywhere, so you can easily clean under the couch, bed or table without effort.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Performance

Battery type: Li-Ion

Battery voltage: 18 V

Charging time: 5 hour(s)

Runtime: 40 minute(s)

Sound power level: 83 dB

Design

Design features: 2-in-1, Auto-off, Translucent dust chamber

Color: Titanium

Filtration

Dust capacity: 0.6 L

Motor filter: Washable filter

Nozzles and accessories

Accessories included: Brush, Crevice tool

Standard nozzle: TriActive Turbo Nozzle

Weight and dimensions

Weight of product: 3.2 kg

Dimensions of product (LxWxH):
215x253x1150 mm

