

PHILIPS

Vacuum cleaner
with bag

Performer Compact

2000 W

Super Clean Air filter

3L



FC8385/02



Full performance. High suction power. Compact yet powerful with AirflowMax technology

The new Philips Performer Compact vacuum cleaner delivers top cleaning performance with minimum effort. AirflowMax technology keeps the suction power stronger for longer. The ExtraClean nozzle removes dust efficiently on all floors.

Remarkable cleaning results

- 2000 W motor for strong suction power
- Revolutionary AirflowMax technology for strong suction power
- New ExtraClean nozzle for thorough cleaning on all floors

1-year supply of dust bags*

- 5 s-bags and 1 s-fresh (scent granules)

Effortless cleaning

- Long reach tool for difficult to access areas
- On-board accessories for ultimate convenience
- ActiveLock couplings to easily adjust to each cleaning task
- Compact and light for effortless cleaning and easy storage

Clean air filter system

- Super Clean Air filter captures >99% of particles
- S-bag Classic Long Performance lasts up to 50% longer



reddot award 2016
winner

Highlights

2000 Watt motor




2000 W motor generates strong suction power for excellent cleaning results.

AirflowMax technology



The unique AirflowMax technology keeps the suction power stronger for longer* to use the bag to the very end. The technology is built around the optimization of three key elements: 1) Unique ribs profile inside the dust chamber to maximize airflow around the dustbag and enable the use of the entire bag surface. 2) Specially designed dust chamber capacity that allows the dustbag to fully unfold uniformly. 3) High quality, non-clogging fibre structures in the dustbag absorb dust without blocking the pores, thus avoiding a reduction in suction power.

ExtraClean nozzle

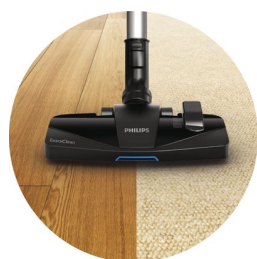

The new ExtraClean nozzle delivers a thorough cleaning on all types of floors. The nozzle is designed with a large front opening to pick up


big crumbs, while at the same time it seals closely to the floor to ensure a good pick-up of the fine dust.

5 s-bags and 1 s-fresh



This product is supplied with additional 5 original Philips dust bags (s-bag®) and 1 pack of scent granules (s-fresh®). Thus, you will not need to buy any dust bags for 1 year after your vacuum cleaner purchase!

Long reach tool

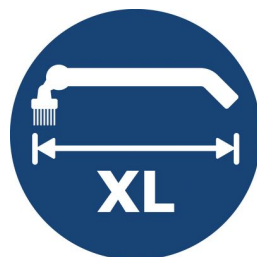


The Long reach tool is a clever accessory which helps you clean difficult areas like the top of the furniture or high shelves. The angle of the brush is adjustable, so you can have the exact instrument for your needs.

On-board accessories



The vacuum cleaner is designed with integrated accessories, so that you do not need to carry extra pieces around while you clean. The crevice tool is located on the canister, always ready to use.

ActiveLock couplings

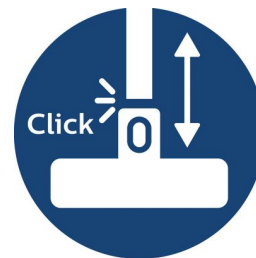

The ActiveLock couplings allow you to easily connect and disconnect the different nozzles and accessories from the telescopic tube while cleaning.



IF DESIGN AWARD

Award-winning products are selected by the top names in design. Each year, iF International Forum Design GmbH organizes one of the world's most celebrated and valued design competitions: the iF DESIGN AWARD. Recognized as a symbol of design excellence around the world, the iF DESIGN AWARD welcomes over 5,000 submissions from 70 countries every year.



reddot award 2016
winner

RED DOT DESIGN AWARD 2016

The Red Dot Design Award is an international product design and communication design prize. Winning an award in this competition is proof that the creative minds have a vision and are able to commit, to carry out, to research and to experiment - and that they are a name to watch out for in the future. There are prize categories for product design, design agencies, and design concepts.

Specifications

Performance

Input power (max): 2000 W
Input power (IEC): 1800 W
Suction power (max): 375 W
Sound power level: 83 dB
Vacuum (max): 23.5 kPa

Design

Color: Star white

Filtration

Dust capacity: 3 L
Dust bag type: s-bag Classic Long
Performance
Exhaust filter: Super Clean Air filter
Motor filter: 1 layer foam filter

Usability

Action radius: 9 m
Cord length: 6 m
Tube type: Metal 2-piece telescopic tube
Tube coupling: ActiveLock
Wheel type: Rubber
Carrying handle: Front

Nozzles and accessories

Standard nozzle: ExtraClean nozzle
Accessories included: Crevice tool, Integrated brush
Extra accessories: 5 s-bags, 1 s-fresh, Long reach tool

Sustainability

Packaging: > 90% recycled materials
User manual: 100% recycled paper

Weight and dimensions

Weight of product: 4.5 kg
Dimensions of product (LxWxH): 400 x 282 x 251 mm

