

# PHILIPS

## Blender

Daily Collection

400W

1.5 L Plastic Jar

with mill

5 star serrated blade



HR2108/03



## Fresh smoothie and food made easy

With extra strong power and blade

This Philips Daily Collection Blender offers a 400 W motor, 1.5 l jar and a serrated 5star blade combined to create perfect end results for your smoothie and food preparation. It makes your tough blending made easy!

### For perfect smoothie and food preparation

- Strong 400 W motor
- Serrated 5star blade for effective blending and mixing
- Mill for grinding hard ingredients
- Multiple speeds for soft and hard ingredients
- Pulse for better mixing and blending

### Easy to use

- Comfortable thumb grip handle
- Improved pouring by new spout
- Integrated power cord storage
- Lock indicator for ready to use
- All parts are dishwasher safe

### Quality guaranteed

- 2 year guarantee



[asimpleswitch.com](http://asimpleswitch.com)

# Highlights

## 400 W motor

# 400 W

Strong 400 W motor for blending and mixing easily.

## Serrated 5star blade



The newly designed blade will blend and cut the ingredients effectively and make a perfect smoothie for you and your family.

## Mill



Use mill accessory to grind any hard ingredients like coffee beans, nuts and dried chili and peppers.

## New spout design



New spout design will prevent leakage after pouring to the glass.

## Comfortable thumb grip handle




New handle has a thumb grip position to hold and carry the jar easily.

## Pulse for mixing and blending



You can use "Pulse" mode to control blending degree and time conveniently.

## Multiple speeds

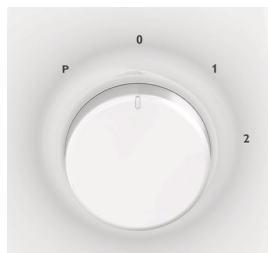

Blend at different speeds and to different degrees with a choice of setting.

## All parts are dishwasher safe



All removable parts can be cleaned in the dishwasher.

## Lock indicator



This simple and easily recognizable lock indicator will let you know when the appliance is ready to use with safety.

## Integrated power cord storage

Save space with the handy cord storage system under the housing of the blender.

## 2 year guarantee



With 2 years world-wide warranty.



[asimpleswitch.com](http://asimpleswitch.com)

## Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

# Specifications

## Accessories

Mill

## Design specifications

Color(s): White and beige

Material blender jar: SAN

Material housing: PP

Material blade: Stainless steel

## General specifications

Speed setting: 2 and pulse

Cord storage

Non-slip feet

## Technical specifications

Power: 400 W

Voltage: 220-240 V

Frequency: 50/60 Hz

Max Jar Capacity: 1.5 l

Effective jar capacity: 1.25 L

Capacity mill: 120 ml

Cord length: 0.85 m

