

PHILIPS

Steam generator
iron

SpeedCare

Max 5 bar pump pressure

170 g steam boost

Carry lock

1.2 L fixed watertank



GC6635



Faster and easier ironing**

with 2 times more steam** than a steam iron

Philips SpeedCare steam generator delivers more steam than a steam iron, it helps you speed up ironing. Enjoy more quality time of the reduced ironing time with your loved family by using Philips SpeedCare steam generator iron.

Fast and powerful ironing

- Max 5 bar pump pressure
- Continuous steam up to 110 g/min
- 1.2 L water tank and refill anytime during ironing
- Triple precision tip for optimal control and visibility
- Lock your iron securely to the base station
- Automatically turned off for safety and energy saving
- Smart Calc clean system with sound&light Calc Clean reminder
- Ready to use in 2 minutes with unlimited refill
- Compact size and light weight for easy storage

Highlights

Continuous steam



The more steam, the faster the ironing. The unique technology in a Philips steam generator iron generates powerful steam making ironing easier, better and faster.

Safety carry lock



Your steam generator iron comes with a safety carry lock. You can lock your iron safely on the base, making it safer, reducing the risk of people touching the hot soleplate. You can also carry the steam generator easily.

Automatic shut-off




The safety auto off function automatically switches off the appliance if it has not been used for a few minutes, also saving energy.

Steam ready in 2 minutes



Steam is ready to use in 2min and can be refilled at anytime during ironing.

Triple precision tip

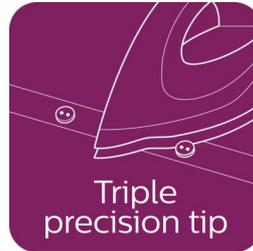

The tip of this Philips iron is precise in 3 ways: it has a pointed tip, button groove and a sleek design of the nose. Triple Precision tip enables you to reach even into the most tricky areas, e.g. around the buttons or between the pleats.

Max 5 bar pump pressure



The more steam, the faster the ironing. Consistent powerful steam is generated which penetrates deep inside the garments making ironing faster and better. Steam power can be regulated to fit your needs.

Smart Calc Clean system



Smart Calc Clean system is an intergrated descaling and cleaning fuction to protect your steam generator iron. After each about 10 hour ironing, you will be reminded by the soud and light of your steam genereator iron to perform calc clean process. The Calc Clean Container will provide you the convenience during the Calc Clean process, by just resting your iron on the container without holding your iron to stress your waist. After cleaning process, all the dirty water is collected in the container, your steam generator iron is ready to use again.

Compact size and light weight



Thanks to the revolutionary ProVelocity technology, we made your steam generator iron more compact than ever before. The compact steam generator fits easily on your ironing board making your ironing more convenient. In addition, your steam generator takes much less storage space.

Specifications

Accessories

Calc Clean container

Calc management

Calc clean reminder

Calc clean solution: Smart Calc Clean

Filtered water recommended

Suitable for tap water

Easy to use

Cord freedom (swivel): 180 degree cord freedom

Cord storage: Cord clip

Heat up time: 2 min

Hose length: 1.6 m

Hose storage: Hose storage compartment

Power cord length: 1.8 m

Refill any time

Safety auto off

Storage solution: Carry lock

Ultra light and comfortable

Water tank capacity: 1200 ml

Filling and emptying water: Extra large filling hole, Large filling hole

Fast & powerful crease removal

Continuous steam output: 110 g/min

Power: 2400 W

Soleplate: SteamGlide Ceramic

Steam boost: 170 g

Steam output control

Vertical steaming

Pressure: Max 5 bar pump pressure

Technical specifications

Voltage: 220 - 240 V

Weight and dimensions

Packaging dimensions (WxHxL): 26.4 x 30.3 x 40.4 cm

Product dimensions (WxHxL): 19.8 x 21.7 x 34.6 cm

Weight of iron: 1.1 kg

Weight of iron + base: 2.6 kg

Service

2-year worldwide guarantee

