

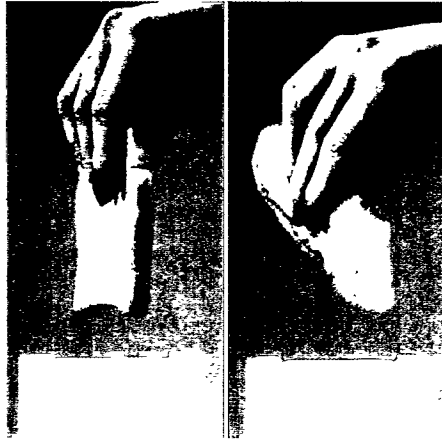


PHILIPS

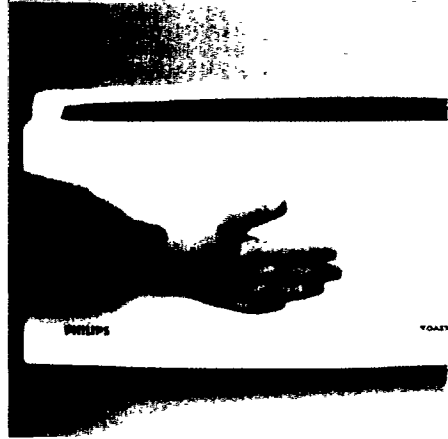

HD 4804
Super Cool Touch Toaster
With Temperature Sensor

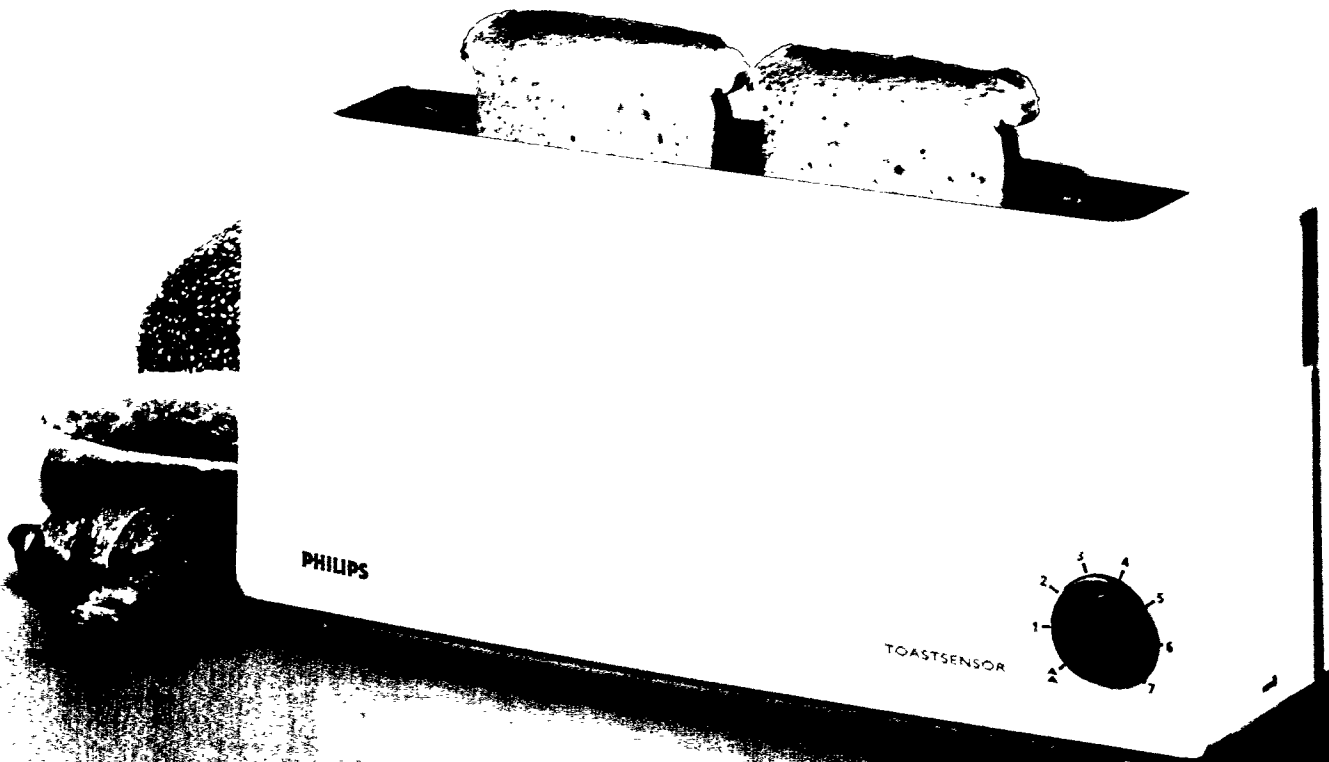

PHILIPS

HD 4804 Super Cool Touch Toaster With Temperature Sensor

The new toaster for a golden and crispy toast, with all kinds and sizes of bread.
Electronically controlled browning by temperature sensor.

FEATURES

- Plastic housing : cool wall
- Electronic timer with temperature sensor
- Cordstorage : integrated in the bottom plate
- Safety pop up device : the toaster switches-off automatically when a slice of bread is jammed in the toaster

TECHNICAL DATA

- Slot dimensions : Length 255 mm
Width 35 mm
Depth 120 mm (effective toast area)
- Temperature of cover : < 60°C / ambient temperature 20°C
- Heating elements : 2 micanite winded heating elements
- Toasting time : first toast cold appl. ≤ 2.5 min.
second and consecutive toast ≤ 2 min.
(browning control set at medium position)
- Mains cord : free length 1.10 m
- Power consumption : 220 - 240 V / 920 - 1100 W
- Dimensions (L x W x H) : 365 x 115 x 180 mm

MATERIAL / COLOURS

- Top housing : polycarbonate white
- Base housing : polycarbonate white
- Slot cover : chromium plated steel
- Browning knob : polycarbonate dark green
- Sliding knob : polycarbonate white
- Cordset : PVC white

PACKAGING

- Dimensions (L x W x H) : 429 x 141 x 200 mm
- Weight : 2 kg
- Dimensions A-box (L x W x H) : 454 x 300 x 425 mm
- Products per A-box : 4 pcs
- Weight A-box : 9.7 kg

Product specification is subject to change without prior notice.
