



Saeco Odea
Automatic espresso
machine

RI9752/01



Espresso in a trendy and functional design

Odea standard line

Grind your favourite coffee beans

- Adjustable ceramic grinders
- Bean to cup system
- Adjust coffee length

Easy to use

- Pannarello to froth milk as you like
- Adjustable drip tray
- Cup holder
- Ergonomic in day to day operation

Easy to clean and maintain

- Removable brewing group
- Descaler Warning

PHILIPS

Saeco, a Philips brand

 **Saeco**



Highlights

Customise coffee



With Saeco you can select your preferred coffee length via the central rotary knob

Adjustable ceramic grinders



Whole beans are freshly ground for every cup by ceramic grinders, always preserving their full aroma and never overheating the coffee.

Bean to cup system



It means that whole coffee beans are freshly ground and directly processed for each and every beverage.

Cup holder



With this practical feature you can store your espresso cups and glasses right on the espresso machine - always within reach and conveniently stored without taking up space.

Cup lift



Manually adjustable drip tray to fit every cup size underneath the coffee dispenser

Descaler Warning



Dedicated led to advise the end user that the machine needs to be descaled

Ergonomy




Saeco is a synonym for convenience: refilling beans or water, emptying the coffee-dump box or the drip tray, all compartments are directly accessible.

Pannarello



With the pannarello you can froth your milk exactly how you like it. Just dip the pannarello in the milk and stir slowly in a circular motion. Froth the milk for as long as you want to create more or less foamy milk.

Removable brewing group

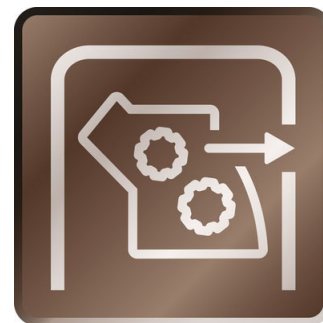

The brewing group is at the heart of every fully automatic coffee machine and it should always be kept clean. A task that doesn't get any more convenient than with a Saeco: remove, rinse and re-insert — finished.

Specifications

Perfect Espresso

- Espresso technology: Saeco adapting system, Aroma-system: pre-brewing

Technical data

- Boiler: Stainless steel
- Frequency: 50 Hz
- Power: 1400 W

- Voltage: 230 V
- Pump Pressure: 15 Bar

Weight and dimensions

- Coffee bean capacity: 180 gr
- Dump box capacity: 14 servings
- Water tank capacity: 1.5 l