

# PHILIPS

Vacuum cleaner  
with bag

Expression

HomeCare

FC8614/01



## Gives dust no chance

Multiple filters trap up to 99.9% of all dust

The Philips Expression vacuum cleaner with bag offers an effective way of filtering pollen, spores, and allergens out of the air. The washable HEPA 12 filter, in combination with the s-bag Clinic, traps up to 99.9% of all dust particles.

### High cleaning power

- 1800 Watt motor generating max. 350 Watt suction power

### Clean air in your home

- Washable HEPA 12 filter, 99.5% filtration

### Dust bag safely traps all dust

- s-bag Clinic catches up to 99.9% of all dust

### Hygienic disposal of dust bag

- Unique Clean Comfort Cassette to avoid contact with dust

### Easy cleaning, even around furniture

- Tri-active nozzle with unique 3-in-1 action


# Highlights

## 1800 Watt motor



Vacuum cleaner with 1800 Watt motor generating max. 350 Watt suction power for perfect cleaning results.

## Washable HEPA 12 filter

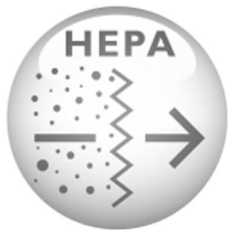

This washable HEPA 12 filter catches at least 99.5% of all harmful microscopic vermin that causes respiratory allergies.

## s-bag Clinic - Anti-allergy



This dust bag filters up to 99.9% of pollen, spores and allergens. Ideal for people with allergies!

## Clean Comfort Cassette



When disposing the dust bag of your Philips vacuum cleaner, there will be no contact with the dust thanks to this patented dust bag holder.

## Tri-active nozzle



This unique nozzle is aerodynamically designed for maximum cleaning efficiency, has side brushes to remove dust from corners and curves, and has a front opening to pick up the big bits. Each stroke will deliver an immediate clean result.

# Specifications

## Design

Color: Oxford blue

## Filtration

Dust bag type: s-bag Clinic Anti-allergy

Dust capacity: 3 L

Exhaust filter: Super Clean Air HEPA 12 washable filter

Motor filter: Triple layer

## Nozzles and accessories

Accessories included: Crevice tool, Small nozzle

Accessory storage: On tubeclip

Standard nozzle: TriActive nozzle

## Performance

Airflow (max): 40 l/s

Input power (IEC): 1600 W

Input power (max): 1800 W

Noise level (Lc IEC): 82 dB

Suction power (max): 350 W

Vacuum (max): 30 kPa

## Usability

Action radius: 10 m

Carrying handle: Front

Clean Comfort cassette

Cord length: 7 m

Tube coupling: Conical

Dust full indicator

Power control: Electronic on appliance

Tube type: Metal lacquered 2-piece telescopic tube

Wheel type: Plastic

