

PHILIPS

Steam generator
iron

PerfectCare
Compact

Max 5.3 bar pump pressure

Up to 250 g steam boost

1.5-l water tank capacity

Carry lock

GC7805/20



Iron faster with 2 x more steam*

Our most compact steam generator

Compact and lightweight, providing powerful continuous steam, the PerfectCare Compact steam generator iron makes fast work of all your ironing.

No temperature setting needed; no burning, guaranteed

- OptimalTEMP technology, no temperature settings required
- Safe on all ironable garments, guaranteed not to burn
- Independently tested and approved

Fast ironing with continuous powerful steam

- Powerful steam for ultimate crease removal
- Calc-clean container included – no cartridges, no extra cost
- Scratch-resistant SteamGlide soleplate provides good gliding
- Save energy with ECO mode

Compact technology

- Lightweight and compact for easy use and storage
- Large tank for long use
- Carry lock for safe and easy transport

Highlights

Ultra-powerful steam



Strong, continuous steam tackles even the thickest fabrics with ease. Watch stubborn creases melt away with an extra steam boost just where you need it. This extra steam is perfect for vertical steaming to refresh clothes and curtains, too.

No temperature setting needed



Iron everything from silk to jeans without adjusting the temperature. Thanks to OptimalTEMP, no dial or settings are needed. So there's no more pre-sorting the laundry, or waiting for the iron to heat up and cool down. You're ready for any fabric, any time.

No burns – guaranteed



Thanks to OptimalTEMP technology, we guarantee that this iron will never cause burns to any ironable fabric. You can even leave it resting face down on your clothes or ironing board. No burns, no shine. Guaranteed.

1.5 L water tank



A 1.5 litre transparent tank gives you 1.5 hours of continuous use. See clearly how much water is left and refill easily under the tap through the large filling door.

Smart descaling



Our built-in descaling system, Smart Calc Clean, reminds you when you need to descale. It also includes a container to make descaling easy. This means no cartridges are required and there are no additional costs.

Approved by experts

The Woolmark Gold seal of approval ensures a product is safe to use on any and every wool fabric. Our steam irons with OptimalTEMP technology are the first and only irons, from any brand, to earn this level of certification.

Compact and convenient




The lightweight, compact size is perfect for storage and fits conveniently on your ironing board. Exclusive ProVelocity technology makes our steam generators smaller and more compact than ever.

SteamGlide soleplate



Our special SteamGlide soleplate smoothly glides over any fabric. It's also non stick, scratch resistant and easy to clean.

Energy saving

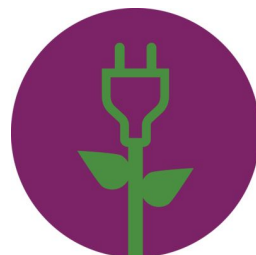

Save energy and get the same great results. ECO mode reduces your energy consumption for garments that require less steam.

Safety carry lock



Lock your iron securely to the base station for easy carrying around the house and to reduce the risk of accidentally touching the hot soleplate.

Specifications

Technology

For all ironable fabrics
No burns
No temperature settings needed
OptimalTEMP technology
ProVelocity steam engine
Smart Control Processor

Fast crease removal

Continuous steam: Up to 120 g/min
Power: 2400 W
Pressure: max 5.3-bar pump
Ready to use: 2 min
Steam boost: Up to 250 g
Steam-on-demand
Variable steam levels
Vertical steam
Voltage: 220-240 V

Easy to use

Safe on all ironable fabrics: Even delicates like silk
Soleplate gliding performance: 4 stars
Soleplate name: SteamGlide
Water tank capacity: 1500 ml

Cord freedom (swivel): 180 degree cord freedom
Hose length: 1.6 m
Integrated power plug
Power cord length: 1.8 m
Precision steam tip
Ready to use: Light indicator, Sound indicator
Refill anytime during use
Safety auto off
Soleplate scratch resistance: 4 stars
Tap water suitable

Scale management

Descaling and cleaning: Smart Calc Clean
Descaling reminder: Light, Sound, no cartridges needed, no extra

Accessories included

Calc clean container

Storage

Carry lock: For transportation and safety
Cord storage: Velcro fix
Hose storage: Hose storage compartment

Size and weight

Packaging dimensions (W x H x D): 23 x 27.5 x 39.3 cm
Product dimensions (W x H x D): 19.3 x 22.3 x 37.3 cm
Total weight with packaging: 3.85 kg
Weight of iron: 1.2 kg
Weight of iron + base: 2.95 kg

Guarantee

2 year worldwide guarantee

Green efficiency

Energy saving mode
Energy saving*: 30 %
Recycled plastic used: 30 %
User manual: 100% recycled paper

Calc management

Calc clean solution: Demineralised water

