

# PHILIPS

Fully automatic  
espresso machines

Series 3200

5 Beverages

LatteGo

Glossy Black

Touch display

EP3241



## 5 delicious fresh bean coffees, easier than ever LatteGo, the fastest to clean milk system ever\*

Easily make aromatic coffee varieties like Espresso, Coffee, Cappuccino and Latte Macchiato at the touch of a button. LatteGo tops milk varieties with silky smooth froth, is easy to set up and can be cleaned in as little as 15 seconds\*

### A variety of coffees customized to your taste

- Enjoy 5 coffees at your fingertips, including cappuccino
- Silky smooth milk froth thanks to high speed LatteGo system
- Easy selection of your coffee with intuitive touch display
- Adjust aroma strength and quantity via My Coffee Choice
- Easily adjust to your taste with 12-step grinder levels

### High quality coffee from fresh beans

- The perfect temperature, aroma and crema cup after cup\*
- 20,000 cups of finest coffee with durable ceramic grinders
- Keep your beans fresh for longer thanks to the aroma seal

### Effortless use and cleaning for everyday enjoyment

- LatteGo is exceptionally easy to clean: 2 parts, no tubes
- Up to 5000 cups\* without descaling thanks to AquaClean
- Easy cleaning thanks to fully removable brew group
- Dishwasher safe parts for your convenience

# Highlights

## 5 aromatic coffees



Enjoy your favourite coffees for your special moments. Whether you crave for an espresso, a coffee or a milk based recipe, your fully-automatic espresso machine delivers a perfect in-cup result with no hassle and in no time!

## LatteGo milk system

Top your coffee off with a silky-smooth layer of milk froth. The LatteGo mixes milk and air at high speed in the round frothing chamber, then adds a splash-free, creamy layer of milk froth to your cup at just the right temperature.

## Intuitive touch display

The irresistible taste and aroma of coffee from fresh beans is just one touch away. Our intuitive touch display allows you to easily select your favorite coffee.

## My Coffee Choice

Adjust the strength and quantity of your beverage with the My Coffee Choice menu. Easily choose from three different settings to suit your preferences.

## 12-step grinder adjustment



Our durable ceramic grinders can be adjusted in 12 steps, so you can turn your beans into anything from ultra-fine powder to coarse grindings.

## Perfect temperature and aroma




The Aroma Extract system intelligently strikes the optimum balance between brewing temperature and aroma extraction by keeping the water temperature between 90 and 98°C, while regulating the water flow rate, so you can enjoy delicious coffees.

## 100% ceramic grinders



Our grinders are 100% pure ceramic: extremely hard and precise, so you can enjoy fresh aromatic coffee, for at least 20.000 cups.

## 2 parts, no tubes milk system

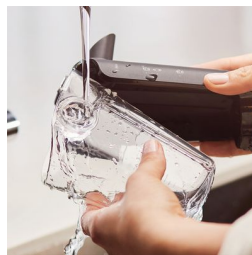

Our 2 parts milk system has no tubes or hidden parts and can be cleaned in as little as 15 seconds under tap\* or in the dishwasher.

## AquaClean filter



By changing the filter after being prompted by the machine, you will not need to descale your machine for up to 5000 cups\*, while enjoying clear and purified water.

## Removable brew group



The brew group is the heart of every fully automatic coffee machine, and should be cleaned regularly. The removable brew group allows you to clean it thoroughly just by rinsing it under the tap.

## Preserve beans' aroma

The new Aroma seal protects your favorite coffee beans and makes sure they preserve their original aroma over time, while reducing the grinder noise.

## Dishwasher safe parts



For your convenience, you can put the milk system, drip tray and the coffee ground container in the dishwasher. This will save time and ensure a hygienic cleaning.

# Specifications

## Accessories

**Included:** Measuring scoop, Water hardness test strip, AquaClean filter, LatteGo storage lid, Grease tube

## Country of origin

**Designed in:** Italy  
**Made in:** Romania

## General specifications

**Ease of cleaning & maintenance:** AquaClean filter compatible  
**Adjustable spout height:** 85-145 mm  
**Milk Solution:** LatteGo  
**User Interface:** Touch screen display  
**Dishwasher safe parts:** Drip tray, LatteGo

## Service

**2-year guarantee**

## Sustainability

**ECO setting**  
**Energy label:** A-class  
**Power consumption brewing:** 1500 W  
**Recyclable packaging material:** >95 %

## Technical specifications

**Capacity milk carafe:** 0.26 L  
**Capacity waste container:** 12 servings  
**Frequency:** 60 Hz  
**Voltage:** 120 V  
**Color & Finishing:** Black, Glossy black  
**Cord length:** 100 cm  
**Filter compatibility:** AquaClean  
**Waste container:** Frontal access  
**Water tank:** Frontal access  
**Weight of product:** 8 kg  
**Product dimensions:** 246x371x433 mm  
**Coffee bean capacity:** 275 g  
**Capacity water tank:** 1.8 L  
**Pump pressure:** 15 bar

## Customization

**Aroma Strength Settings:** 3  
**Grinder Settings:** 12  
**Pre Brew Aroma control**  
**Temperature settings:** 3  
**Coffee and Milk Length:** Adjustable

## Variety

**Beverages:** Espresso, Hot water, Cappuccino, Coffee, Latte Macchiato, Americano  
**Coffee Powder Option**  
**Double Cup**  
**Milk Double Cup:** No

## Other features

**Removable brew group**  
**Aroma Seal**  
**Guided descaling**  
**AquaClean**



\* Based on 8 filters replacement as indicated by the machine. Actual number of cups depends on selected coffee varieties, rinsing and cleaning patterns.

\* Based on consumer testing in Germany comparing leading one touch (Coffee + Milk) Full Automatic Espresso Machines (2017)

\* based on 70-82 °C