

# PHILIPS

## Steam iron

### Azur Pro

2800 W

50 g/min; 210 g steam boost

T-ionicGlide Soleplate

Safety auto off + anti-calc



GC4881/20



## Powerful perfection, every time

Iron away creases fast with powerful steam

The Azur Pro steam iron provides powerful steam so you can get through your ironing in no time and achieve perfect results. Ironing is now easy with ultra-fast gliding, a larger water tank and built-in calc container

#### Fast and powerful performance

- 2800 W for fast heat-up and powerful performance
- Steam output of up to 50 g/min for best crease removal
- Steam boost up to 210g

#### Easy gliding on all fabrics

- T-ionicGlide: our best 5-star rated soleplate

#### Comfortable ironing

- Less refilling with very large 350 ml water tank
- Easy grip for convenient handling while ironing
- Long 2.5 m cord for great reach on the ironing board
- Pointed tip for optimal control and visibility

#### Safe ironing

- Built-In calc container collects calc during ironing
- Iron switches off automatically when left unattended

# Highlights

## 2800 W



Powerful 2800 W for fast heat up and best performance.

## Steam up to 50 g/min



Continuous steam output of up to 50 g/min gives you the perfect amount of steam to efficiently remove all creases.

## Easy grip



A well designed, soft grip on the top of the steam iron will make your ironing session more comfortable.

## T-ionicGlide soleplate




T-ionicGlide is our best gliding and scratch-resistant, 5-star rated soleplate with integrated Titanium-Oxide layer.

## 350 ml water tank



Less refilling with the very large 350 ml water tank, so you can iron more clothes in one go.

## Pointed tip

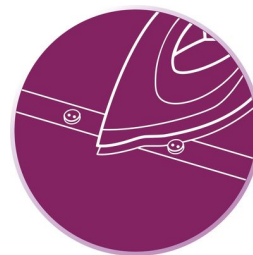

Pointed tip for optimal control and visibility

## Built-in calc container




Our specially designed and built-in calc container collects calc particles during ironing. The Self Clean process flushes the calc out of the iron to maintain consistent ironing performance day after day.

## Automatic shut-off



The steam iron shuts off automatically when left unattended. It will switch off after 8 minutes when left standing on its heel rest and after 30 seconds when left resting on its soleplate or sides.

## 2,5 m cord

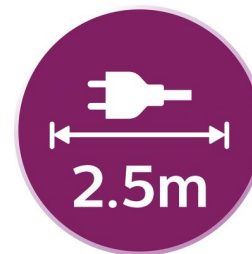

A long 2.5 m cord gives you the reach you need during your ironing. Now you reach every corner of your ironing board without any problems.

## Steam boost up to 210g



Steam boost up to 210g for fast removal of even the most stubborn creases.

# Specifications

## Easy to use

Power cord length: 2.5 m

Safety auto off

Soft grip

Water tank capacity: 350 ml

Drip Stop

Tap water suitable

## Fast crease removal

Continuous steam: 50 g/min

Power: 2800 W

Steam boost: 210 g

Vertical steam

Voltage: 220-240 V

Water spray

## Green efficiency

Energy saving mode

Energy saving\*: 20 %

User manual: 100% recycled paper

## Guarantee

2 year worldwide guarantee

## Scale management

Descaling and cleaning: Built-in calc container, Self-clean, Double active calc clean

## Size and weight

Weight of iron: 1.5 kg

Packaging dimensions (W x H x D): 34,1 x 30 x 36 cm

Product dimensions (W x H x D): 16 x 32 x 14 cm

Total weight with packaging: 1.75 kg

## Fast and powerful crease removal

Soleplate: T-ionicGlide

