

# PHILIPS

Bagged vacuum  
cleaner

5000 series


99.9% dust pick-up

900W

4L

TriActive+LED nozzle

FC8580/09

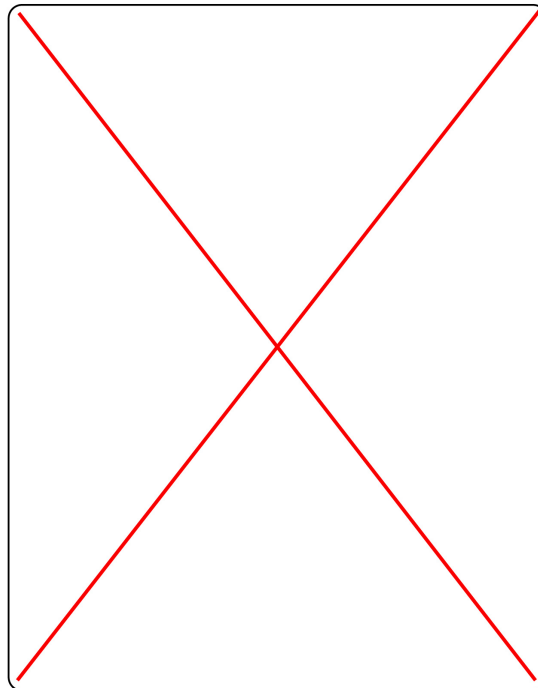

## Most powerful bagged vacuum cleaner by Philips

Locks >99.9%\* of dust with 50% longer bag usage\*\*

The Philips Bagged vacuum cleaner Performer Active achieves maximum deep cleaning results with minimum effort thanks to AirflowMax technology and TriActive+ LED nozzle to reveal the finest hidden dust.

### Superior performance


- Revolutionary AirflowMax technology for strong suction power
- 900W motor for high suction power
- 99.9% dust pick-up\* to deliver deep cleaning results
- Allergy Filter captures 99.9% of particles – ECARF certified
- TriActive+ LED nozzle reveals hidden dust for thorough clean
- Mini Turbo brush for easy (pet) hair and fluff removal

### Effortless cleaning

- Soft brush integrated into handle, always ready to use
- Easy long-lasting bags fit into large 4-liter dust chamber
- ActiveLock couplings easily adjust to every task


# Highlights

## AirflowMax technology

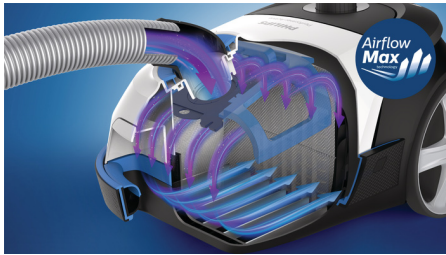

Uniquely designed dust chamber maximizes capacity and airflow with a non-clogging dustbag, that enables strong suction power right up until the dustbag is full.

## High-efficiency 900W motor

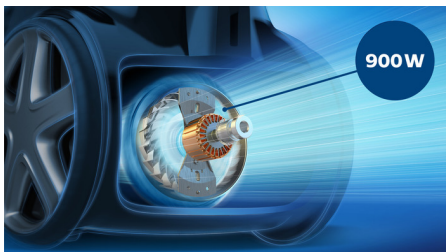


High-efficiency 900W motor delivers high suction power for deep cleaning results.

## 99.9% dust pick-up\*



TriActive+ nozzle and high suction power ensure you can vacuum 99.9% of fine dust\*.

## Certified Allergy Filter

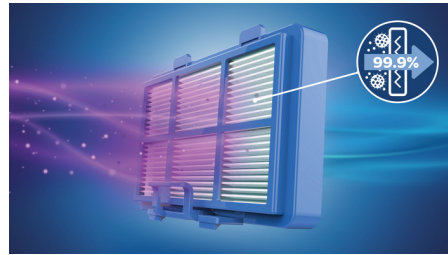

Certified allergy filter captures 99.9% of dust particles - including pollen, pet hair and dust mites - ideal for allergy sufferers.

## Integrated brush



Dusting brush tool is built into the handle so it's always ready to use on furniture, flat surfaces and upholstery.

## Long-lasting 4L s-bags



Large 4-liter dust chamber and long-lasting universal bags allow optimum suction power until full, plus sealed, mess-free disposal.

## TriActive+ LED nozzle

TriActive+ LED lights make invisible dust visible on hard floors so you never miss a spot and can ensure the most thorough cleaning on all types of hard floors. A sensor automatically turns the LED lights on when the nozzle is in use and off when it is not.

## ActiveLock couplings



ActiveLock couplings allow attachments to easily fit to the telescopic tube with a simple snap.

## Mini turbo brush



The Mini Turbo brush rotates to quickly removes hair, fluff and dust from couches, cushions and other fabrics. Ideal for pet owners.

# Specifications

## Performance

Input power (max): 900 W

Airflow (max): 32,17 l/s

Input power (IEC): 650 W

Sound power level: 77 dB

Vacuum (max): 17,5 kPa

## Usability

Action radius: 9 m

Carrying handle: Front

Cord length: 6 m

Tube type: Metal 2-piece telescopic tube

Wheel type: Rubber

Tube coupling: ActiveLock

Power control: Rotary knob

## Design

Color: Opal green

## Filtration

Dust bag type: s-bag Classic Long

Performance

Dust capacity: 4 L

Exhaust filter: Allergy filter

Motor filter: Microfilter

## Nozzles and accessories

Accessories included: Crevice tool, Integrated brush, Small nozzle

Additional nozzle: Mini turbo brush

Standard nozzle: TriActive+ LED nozzle

## Sustainability

Packaging: > 90% recycled materials

User manual: 100% recycled paper

## Weight and dimensions

Dimensions of product (LxWxH):

447x304x234 mm

Weight of product: 5,2 kg

