

PHILIPS

Fully automatic
espresso machines

Philips 5400 Series

12 Beverages

LatteGo milk solution

Chrome

TFT display

EP5447/90



12 delicious fresh bean coffees, easier than ever LatteGo, the fastest to clean milk system ever*

Easily make aromatic coffee varieties like Espresso, Coffee, Cappuccino and Latte Macchiato at the touch of a button. LatteGo tops milk varieties with silky smooth froth, is easy to set up and can be cleaned in as little as 15 seconds*

A variety of coffees customized to your taste

- Enjoy 12 coffees at your fingertips, including café au lait
- Silky smooth milk froth thanks to high speed LatteGo system
- Easy selection of your coffee with the intuitive display
- Adjust aroma and volume with the coffee customizer
- Your perfect cup, every time, thanks to 4 user profiles

High quality coffee from fresh beans

- Even more flavor thanks to the extra shot function
- The perfect temperature, aroma and crema cup after cup*
- Easily adjust to your taste with 12-step grinder levels
- 20,000 cups of finest coffee with durable ceramic grinders

Effortless use and cleaning for everyday enjoyment

- Exceptionally easy to clean with LatteGo: 2 parts, no tubes
- Up to 5000 cups* without descaling thanks to AquaClean
- Easy cleaning thanks to fully removable brew group

Highlights

12 delicious coffees



Every moment has its own kind of coffee to enjoy. From powerful espresso to indulgent cappuccino, your fully automatic espresso machine delivers a perfect in-cup result without any fuss in no time.

LatteGo milk system



Top your coffee off with a silky-smooth layer of milk froth. The LatteGo mixes milk and air at high speed in the round frothing chamber, then adds a splash-free, creamy layer of milk froth to your cup at just the right temperature.

Intuitive display



There's little standing between you and your next delicious cup of coffee with our easy-to-use display. In a few steps you can customize your fresh-bean flavor and flow smoothly from craving to cup.

Coffee customizer



Make any coffee your own with the coffee customizer's easily adjustable settings for intensity, coffee and milk length.

User profiles

Enjoy coffee you love the same way every time with four user profiles that store your customized recipes. With an extra guest profile, your visitors can savor a coffee exactly the way they like, without changing yours.

Extra shot function



Boost your drink's intensity with the coffee customizer's extra-shot feature, which adds powerful flavor without the bitterness.

Perfect temperature and aroma



The Aroma Extract system intelligently strikes the optimum balance between brewing temperature and aroma extraction by keeping

the water temperature between 90 and 98°C, while regulating the water flow rate, so you can enjoy delicious coffees.

12-step grinder adjustment




Our durable ceramic grinders can be adjusted in 12 steps, so you can turn your beans into anything from ultra-fine powder to coarse grindings.

100% ceramic grinders



Our grinders are 100% pure ceramic: extremely hard and precise, so you can enjoy fresh aromatic coffee, for at least 20,000 cups.

Exceptionally easy to clean

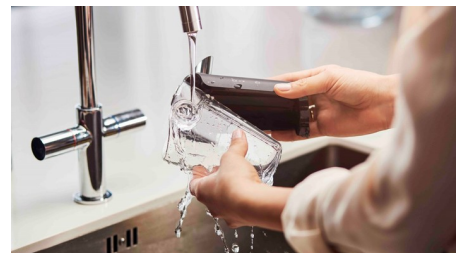

For your convenience, you can put LatteGo drip tray and the coffee ground container in the dishwasher. This will save time and ensure a hygienic cleaning.

Specifications

Country of origin

Designed in: Italy
Made in: Romania

General specifications

Ease of cleaning & maintenance: AquaClean filter compatible
Type of display: TFT
Adjustable spout height: 85 - 145 mm
Milk Solution: LatteGo
Dishwasher safe parts: Drip tray, LatteGo

Technical specifications

Capacity milk carafe: 0.26 L
Capacity waste container: 12 servings
Frequency: 50 Hz
Voltage: 230 V
Color(s): Black
Finishing: Chromed
Cord length: 100 cm
Filter compatibility: AquaClean
Waste container: Frontal access
Water tank: Frontal access
Weight of product: 8 kg

Product dimensions: 246x372x433 mm
Coffee bean capacity: 275 g
Capacity water tank: 1.8 L
Pump pressure: 15 bar

Customization

Aroma Strength Settings: 5
Grinder Settings: 12
Pre Brew Aroma control
User Profiles: 4, Guest
Temperature settings: 3
Coffee and Milk Length: Adjustable

Variety

Beverages: Espresso, Coffee, Americano, Cappuccino, Latte Macchiato, Flat white, Café au Lait, Caffè Latte, Caffè crema, Ristretto, Espresso Lungo, Travel mug function, Frothed milk, Hot water
Coffee Powder Option
Double Cup
Milk Double Cup: No

Other features

Removable brew group
Aroma Seal
Guided descaling
AquaClean

Accessories

Included: Measuring scoop, Water hardness test strip, AquaClean filter, Grease tube, LatteGo storage lid

Service

2-year guarantee

Sustainability

ECO setting
Power consumption brewing: 1500 W
Recyclable packaging material: > 95%

Bazaarvoice_DA_CO_FAM

S5400: PHI 5400 LatteGo

