

# PHILIPS

Fully automatic  
espresso machines

Series 3200

4 Beverages

Classic Milk Frother

Glossy Black

Touch display

EP3221



## 4 delicious coffees from fresh beans, with ease Thanks to the intuitive touch display

Enjoy the delicious taste and aroma of coffee from fresh beans, at the perfect temperature, thanks to our intelligent brewing system. The classic milk frother allows you to create a silky smooth cappuccino or latte macchiato with ease.

### A variety of coffees customized to your taste

- Enjoy 4 coffees at your fingertips
- Delicious milk froth thanks to the classic milk frother
- Easy selection of your coffee with intuitive touch display
- Adjust aroma strength and quantity via My Coffee Choice
- Easily adjust to your taste with 12-step grinder levels

### High quality coffee from fresh beans


- The perfect temperature, aroma and crema cup after cup\*
- 20,000 cups of finest coffee with durable ceramic grinders
- Keep your beans fresh for longer thanks to the aroma seal

### Effortless use and cleaning for everyday enjoyment

- Up to 5000 cups\* without descaling thanks to AquaClean
- Easy cleaning thanks to fully removable brew group
- Dishwasher safe parts for your convenience

# Highlights

## 4 aromatic coffees

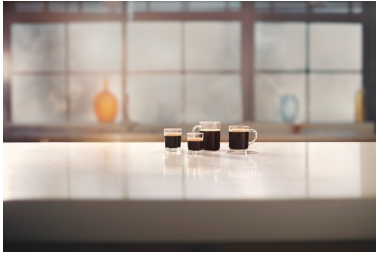

Enjoy your favourite coffees for your special moments. Whether you crave for an espresso, a coffee or a milk based recipe, your fully-automatic machine delivers a perfect in-cup result with no hassle and in no time!

## Classic milk frother

The Classic Milk Frother dispenses steam, allowing you to easily prepare silky smooth milk froth for your cappuccino. What's more? With only two parts, the Classic Milk Frother is also easy to clean.

## Intuitive touch display

The irresistible taste and aroma of coffee from fresh beans is just one touch away. Our intuitive touch display allows you to easily select your favorite coffee.

## My Coffee Choice

Adjust the strength and quantity of your beverage with the My Coffee Choice menu. Easily choose from three different settings to suit your preferences.

## 12-step grinder adjustment



Our durable ceramic grinders can be adjusted in 12 steps, so you can turn your beans into anything from ultra-fine powder to coarse grindings.

## Perfect temperature and aroma



The Aroma Extract system intelligently strikes the optimum balance between brewing temperature and aroma extraction by keeping the water temperature between 90 and 98°C, while regulating the water flow rate, so you can enjoy delicious coffees.

## 100% ceramic grinders



Our grinders are 100% pure ceramic: extremely hard and precise, so you can enjoy fresh aromatic coffee, for at least 20.000 cups.

## Preserve beans' aroma



The new Aroma seal protects your favorite coffee beans and makes sure they preserve their original aroma over time, while reducing the grinder noise.

## AquaClean filter



By changing the filter after being prompted by the machine, you will not need to descale your machine for up to 5000 cups\*, while enjoying clear and purified water.

## Removable brew group



The brew group is the heart of every fully automatic coffee machine, and should be cleaned regularly. The removable brew group allows you to clean it thoroughly just by rinsing it under the tap.

## Dishwasher safe parts



For your convenience, you can put the milk system, drip tray and the coffee ground container in the dishwasher. This will save time and ensure a hygienic cleaning.

# Specifications

## Country of origin

Designed in: Italy  
Made in: Romania

## General specifications

User Interface: Touch screen display  
Milk Solution: Classic Milk Frother  
Adjustable spout height: 85-145 mm  
Dishwasher safe parts: Classic milk frother, Drip tray  
Ease of cleaning & maintenance: AquaClean filter compatible

## Technical specifications

Capacity milk carafe: X L  
Capacity waste container: 12 servings  
Frequency: 60 Hz  
Voltage: 120 V  
Color & Finishing: Black, Glossy black  
Cord length: 100 cm  
Waste container: Frontal access

Water tank: Frontal access  
Weight of product: 7.5 kg  
Product dimensions: 246x371x433 mm  
Coffee bean capacity: 275 g  
Capacity water tank: 1.8 L  
Filter compatibility: AquaClean  
Pump pressure: 15 bar

## Customization

Aroma Strength Settings: 3  
Grinder Settings: 12  
Pre Brew Aroma control  
Temperature settings: 3

## Variety

Beverages: Espresso, Hot water, Coffee, Americano, Espresso Lungo  
Coffee Powder Option  
Double Cup  
Milk Double Cup: No

## Other features

Removable brew group  
Aroma Seal  
Guided descaling  
AquaClean

## Accessories

Included: Grease tube, Measuring scoop, Water hardness test strip, AquaClean filter

## Service

2-year guarantee

## Sustainability

ECO setting  
Energy label: A-class  
Power consumption brewing: 1500 W  
Recyclable packaging material: >95 %

