

PHILIPS


Bagless vacuum cleaner

7000 series

900 W

PowerCyclone 8

FC9747/09

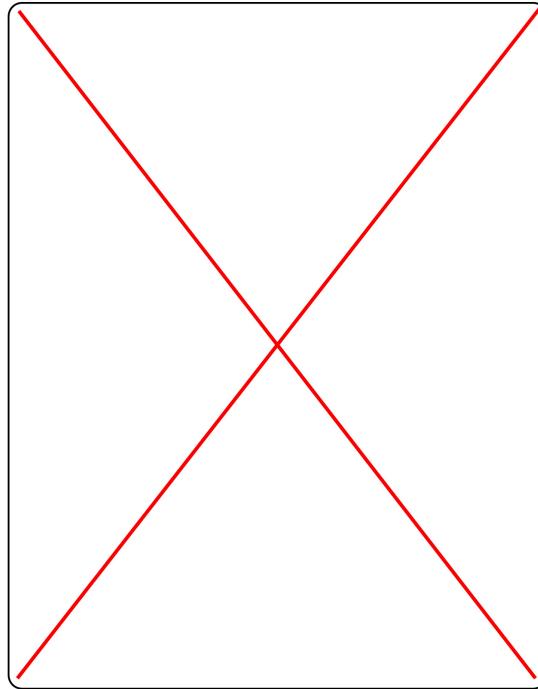

Highest suction power with PowerCyclone 8*

AllergyLock capturing >99.9%** of fine dust

The Philips Bagless Vacuum 7000 Series features our highest ever suction power. Make supreme cleaning effortlessly simple with PowerCyclone 8 technology and TriActive+ LED nozzle to reveal hidden dust.

Superior performance


- 900W motor for high suction power
- 99.9% dust pick-up** to deliver deep cleaning results
- PowerCyclone 8 enables highest suction power for longer
- Allergy Lock traps dust inside for a high level of hygiene
- TriActive+ LED nozzle reveals hidden dust for thorough clean
- Mini Turbo brush for easy (pet) hair and fluff removal
- Allergy H13 filter system captures >99.9% of fine dust

Effortless cleaning

- On board accessories: Conveniently stored, always at hand
- Digital power control function to adjust suction power
- Dust container designed for hygienic emptying with one hand
- Soft brush integrated into handle, always ready to use

Highlights

High-efficiency 900W motor

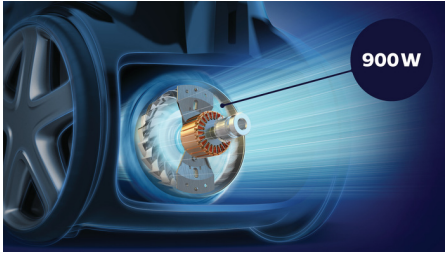

High-efficiency 900W motor with over 50,000 RPM, generates high suction power for a superior clean every time. Register at Philips.com within 3 months of purchase for a 5-year motor warranty.

99.9% dust pick-up**

TriActive+ LED nozzle and high suction power ensure you can vacuum 99.9% of fine dust**.

PowerCyclone 8 technology



PowerCyclone 8 technology features a powerful, swirling action to maximize air flow and enable highest suction power. Super accelerated air flow in the cylindrical chamber efficiently separates dust from the air at >185km/h, ensuring stronger suction power for longer, for immaculate cleaning results.

Allergy lock



Allergy Lock system uses a sensor to ensure dust container is fully sealed before operating, trapping dust and allergens inside for a clean and ultra hygienic environment.

TriActive+ LED nozzle

TriActive+ LED lights make invisible dust visible on hard floors so you never miss a spot and can ensure the most thorough cleaning on all types of hard floors. A sensor automatically turns the LED lights on when the nozzle is in use and off when it is not.

On board accessories



Onboard accessories are stored conveniently inside the back compartment so they're always easy to access when you need them.

Digital power control



Digital power control function easily adjusts suction power for different cleaning tasks, from hard floors to soft furnishings, with the touch of a button.

Hygienic dust disposal



Easy-to-empty dust container is designed for hygienic disposal with one hand to help minimize dust cloud.

Integrated brush



Dusting brush tool is built into the handle so it's always ready to use on furniture, flat surfaces and upholstery.

Mini turbo brush



The Mini Turbo brush rotates to quickly remove hair, fluff and dust from couches, cushions and other fabrics. Ideal for pet owners.

Allergy H13 filter



Allergy H13 filter system catches >99.9% of fine dust particles - including pollen, pet hair and dustmites - ideal for allergy sufferers. Filtration level is equivalent to HEPA 13****.

Specifications

Performance

Airflow (max): 32.5 l/s
Input power (max): 900 W
Sound power level: 67 – 75 dB

Usability

Action radius: 10 m
Carrying handle: Top and front
Cord length: 7 m
Tube type: Metal 2-piece telescopic tube
Wheel type: Rubber
Tube coupling: SmartLock
Power control: Electronic on appliance

Design

Color: Ink Black

Filtration

Dust capacity: 2 L
Exhaust filter: Allergy H13 filter
Motor filter: Lifetime washable filter
Filtration level: HEPA13 level****

Nozzles and accessories

Accessories included: Crevice tool, Small nozzle, Integrated brush
Accessory storage: On board
Additional nozzle: Mini turbo brush
Extra accessories: CP0618 Inlet filter, CP0617

Exhaust filter

Standard nozzle: TriActive+ nozzle, TriActive+ LED nozzle

Sustainability

Packaging: > 90% recycled materials
Stand-by power consumption: < 0,5 W
User manual: 100% recycled paper

Weight and dimensions

Dimensions of product (LxWxH):
505x292x292 mm
Weight of product: 5.5 kg

