

# PHILIPS

Steam generator  
iron

PerfectCare  
Compact

Max 6.5 bar pump pressure

Up to 400g steam boost

1.5 L water tank capacity

Carry lock



GC7840/20



## Iron faster with 2x more steam\*

### Our most compact steam generator

Powerful, continuous steam makes fast work of all your ironing – without any need to adjust temperature thanks to our OptimalTEMP technology. Compact and lightweight for easy use and storage.

#### Compact technology

- Large tank for long use
- Automatic shut-off when iron is left unattended
- Lightweight and compact for easy use and storage
- Carry lock for safe and easy transport

#### Fast ironing with continuous powerful steam

- Save energy with ECO mode
- Calc-clean container included – no cartridges, no extra cost
- Scratch resistant SteamGlide soleplate provides good gliding
- Powerful steam for ultimate crease removal

#### No temperature setting needed, guaranteed no burn

- Safe on all ironable garments, no-burns guaranteed
- OptimalTEMP technology, no temperature settings required


# Highlights

## 1,5L water tank



A 1.5-liter transparent tank gives you 1.5 hours of continuous use. See clearly how much water is left and refill easily under the tap through the large filling door.

## Automatic shut-off

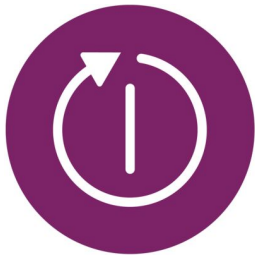

The automatic shut off function automatically switches off your steam generator iron if it has not been used for a few minutes. This saves energy and gives you peace of mind.

## Compact and convenient



The lightweight, compact size is perfect for storage and fits conveniently on your ironing board. Exclusive ProVelocity technology makes our steam generators smaller and more compact than ever.

## Energy saving



Save energy and get the same great results. ECO mode reduces your energy consumption for garments that require less steam.

## No burns – guaranteed



Thanks to OptimalTEMP technology, we guarantee this iron will never cause burns to any ironable fabric. You can even leave it resting face down on your clothes or ironing board. No burns, no shine. Guaranteed.

## No temperature setting needed



Iron everything from silk to jeans without adjusting the temperature. Thanks to OptimalTEMP, no dial or settings are needed. So there's no more pre-sorting the laundry, or waiting for the iron to heat up and cool down. You're ready for any fabric, anytime.

## Safety carry lock



Lock your iron securely to the base station for easy carrying around the house and to reduce the risk of accidentally touching the hot soleplate.

## Smart descaling



Our built in descaling system, Smart Calc Clean reminds you when you need to descale. It includes a container to make descaling easy. This means no cartridges are required and no additional costs.

## SteamGlide soleplate



Our special SteamGlide soleplate smoothly glides over any fabric. It's also non-stick, scratch-resistant and easy to clean.

# Specifications

## Technology

For all ironable fabrics  
No burns  
No temperature settings needed  
OptimalTEMP technology  
ProVelocity steam engine  
Smart Control Processor

## Fast crease removal

Continuous steam: Up to 120 g/min  
Power: 2400 W  
Pressure: max 6.5 bar pump  
Ready to use: 2 min  
Steam boost: Up to 400 g  
Steam-on-demand  
Variable steam levels  
Vertical steam  
Voltage: 220-240 V

## Easy to use

Safe on all ironable fabrics: Even delicates like silk  
Soleplate gliding performance: 3 stars  
Soleplate name: SteamGlide

Water tank capacity: 1500 ml  
Cord freedom (swivel): 180 degree cord freedom  
Hose length: 1.6 m  
Integrated power plug  
Power cord length: 1.8 m  
Precision steam tip  
Ready to use: Light indicator, Sound indicator  
Refill any time during use  
Safety auto off  
Soleplate scratch resistance: 4 stars  
Tap water suitable

## Scale management

Descaling and cleaning: Smart Calc Clean  
Descaling reminder: Light, Sound, no cartridges needed, no extra

## Storage

Carry lock: For transportation and safety  
Cord storage: Velcro fix  
Hose storage: Hose storage compartment

## Accessories included

Calc clean container

## Size and weight

Packaging dimensions (WxHxL): 23 x 27.5 x 39.3 cm  
Product dimensions (WxHxL): 19.3x22.3x37.3 cm  
Total weight with packaging: 3.85 kg  
Weight of iron: 1.2 kg  
Weight of iron + base: 2.95 kg

## Guarantee

2 year worldwide guarantee

## Green efficiency

Energy saving mode  
Energy saving\*: 30 %  
Recycled plastic used: 30 %  
User manual: 100% recycled paper

