

PHILIPS

Steam iron

3000 Series


2600 W power

40 g/min continuous steam

200 g steam boost

Ceramic

DST3041/36

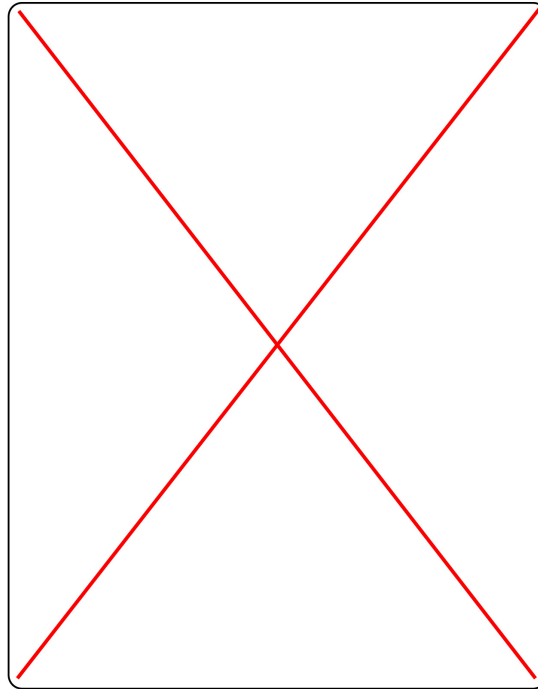

Powerful steam to tackle every crease

Steamboost up to 200g

Our steam iron 3000 series makes ironing easy with the powerful steam boost that tackles tough creases. The ceramic soleplate ensures smooth gliding while the 300ml water tank is large enough to finish smaller ironing loads without a refill.

Fast ironing

- Steam boost up to 200 gram for extra power
- Continuous steam up to 40g/min for consistent performance
- 2600 watt for fast heat-up

Easy ironing

- Smooth gliding ceramic soleplate
- Our drip stop prevents water dripping on your garment
- Vertical steaming for hanging fabrics
- Reach difficult places easily with the triple precision tip
- Iron more in one go with the 300ml water tank
- Heat resistant storage box

Long lasting performance

- Built-in calc-clean slider, long-lasting steam performance

Highlights

Continuous steam up to 40g/min

Strong and consistent steam output to remove creases faster.

Steam boost up to 200 gram

The strong steam boost gives you that extra power to penetrate deeper into the fabric and cut through the tough creases easily.

2600 watt for fast heat-up

Delivers fast warm-up and powerful performance.

Ceramic soleplate

Our durable ceramic soleplate glides well on any ironable garment. It does not stick to your garment, is scratch resistant and easy to keep clean.

Drip stop

Our drip-stop system prevents leakage to avoid stains from water droplets, so you can iron with confidence at any temperature.

Vertical steam

With the vertical steam function you can refresh garments right on the hanger and remove creases from hanging fabrics such as curtains. No ironing board required.

Triple precision tip

The tip is precise in 3 ways: it has a pointed tip, button groove and sleek nose design. Our triple precision tip helps you handle even the hardest-to-iron spots, like buttons and pleats.

Built-in calc-clean slider



This iron operates with ordinary tap water. Calc-clean is a built-in cleaning function to remove calcium buildup, or limescale, and maintain peak performance.

300ml water tank

Fewer refills are required thanks to a large 300ml water tank. So you can iron more clothes in one go.

Heat resistant storage box

This heat resistant storage box is designed for storing the hot iron easily and immediately after use.

Specifications

Powerful performance

Continuous steam: 40 g/min
Power: 2600 W
Ready to use: 35 sec.
Steam boost: Up to 200 gram

Easy to use

Drip stop
Soleplate: Ceramic
Power cord length: 1.9 m
Vertical steam
Voltage: 220-240 V
Water tank capacity: 300 ml
Water spray
Tap water suitable

Storage

Heat resistant storage box

Green efficiency

Energy saving mode
Product packaging: 100% recyclable
User manual: 100% recycled paper

Size and weight

Packaging dimensions (WxHxL): 32x13x16.2 cm
Product dimensions (WxHxL): 12.1x14.3x29 cm
Total weight with packaging: 1.5 kg
Weight of iron: 1.2 kg

Calc management

Descaling and cleaning
Built-in Calc Clean Slider

Guarantee

2 year worldwide guarantee

