

# PHILIPS

## Steam iron

### 3000 Series


2600 W power

40 g/min continuous steam

200 g steam boost

Ceramic

DST3041/89

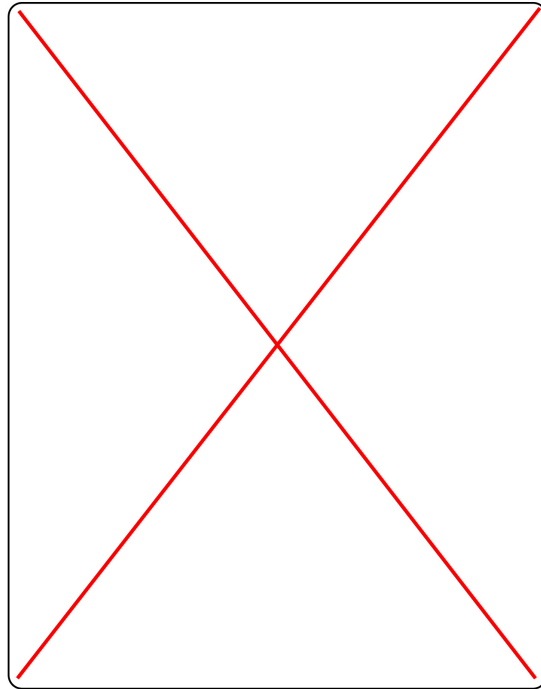

## Powerful steam to tackle every crease

### Steam boost up to 200 g

Our steam iron 3000 series makes ironing easy with the powerful steam boost that tackles tough creases. The ceramic soleplate ensures smooth gliding, while the 300 ml water tank is large enough to finish smaller ironing loads without a refill.

#### Fast ironing

- Steam boost up to 200 gram for extra power
- Continuous steam up to 40 g/min for consistent performance
- 2600 watt for fast heat-up

#### Easy ironing

- Smooth gliding ceramic soleplate
- Our drip-stop prevents water dripping on your garment
- Vertical steaming for hanging fabrics
- Reach difficult places easily with the triple precision tip
- Iron more in one go with the 300 ml water tank
- Extra-long 2.5 m cord

#### Long-lasting performance

- Built-in calc-clean slider, long-lasting steam performance

# Highlights

**Continuous steam up to 40 g/min**

Strong and consistent steam output to remove creases faster.

**Steam boost up to 200 gram**

The strong steam boost gives you that extra power to penetrate deeper into the fabric and cut through the tough creases easily.

**2600 watt for fast heat-up**

Delivers fast warm-up and powerful performance.

**Ceramic soleplate**

Our durable ceramic soleplate glides well on any ironable garment. It does not stick to your garment, is scratch resistant and easy to keep clean.

**Drip-stop**

Our drip-stop system prevents leakage to avoid stains from water droplets, so you can iron with confidence at any temperature.

**Vertical steam**

With the vertical steam function you can refresh garments right on the hanger and remove creases from hanging fabrics such as curtains. No ironing board required.

**Triple precision tip**

The tip is precise in 3 ways: it has a pointed tip, button groove and sleek nose design. Our triple precision tip helps you handle even the hardest-to-iron spots, like buttons and pleats.

**Built-in calc-clean slider**

This iron operates with ordinary tap water. Calc-clean is a built-in cleaning function to remove calcium build-up, or lime scale, and maintain peak performance.

**300 ml water tank**

Fewer refills are required thanks to a large 300 ml water tank, so you can iron more clothes in one go.

**Extra-long 2.5 m cord**

An extra-long 2.5 metre cord provides maximum reach to anywhere on the ironing board and convenience.

# Specifications

**Powerful performance**

**Continuous steam:** 40 g/min

**Power:** 2600 W

**Ready to use:** 35 sec.

**Steam boost:** Up to 200 gram

**Easy to use**

**Drip-stop**

**Soleplate:** Ceramic

**Power cord length:** 1.9 m

**Vertical steam**

**Voltage:** 220-240 V

**Water tank capacity:** 300 ml

**Water spray**

**Tap water suitable**

**Green efficiency**

**Energy saving mode**

**Product packaging:** 100% recyclable

**User manual:** 100% recycled paper

**Size and weight**

**Packaging dimensions (W x H x D):** 32 x 13 x 16.2 cm

**Product dimensions (W x H x D):** 12.1 x 14.3 x 29 cm

**Total weight with packaging:** 1.5 kg

**Weight of iron:** 1.2 kg

**Calc management**

**Descaling and cleaning**

**Built-in Calc-Clean Slider**

**Guarantee**

**2 year worldwide guarantee**

