

# PHILIPS

Steam Generator

PerfectCare 7000  
Series

Guaranteed no burns\*

1.8L detachable watertank

Ultra-light iron

PSG7030/20



## Incredibly light and powerful

Effortless ironing. Great results.

PerfectCare 7000 series is designed for your comfort and convenience. Ultra-light and easy to handle and with powerful steam to achieve great results fast. With OptimalTEMP technology to guarantee no burns on all ironable garments.

### Effortless ironing with great results

- OptimalTEMP technology, no burns guaranteed\*

### Powerful performance

- Powerful steam for crease removal
- Light weight iron ideal for vertical steaming
- SteamGlide Elite soleplate for ultimate gliding performance

### Extra convenience to use

- 1.8L detachable water tank for easy refilling
- Easy De-Calc to extend the lifetime of your iron
- Automatic shut off when iron is left unattended
- Safe carry lock for safe and easy transport

# Highlights

## No temperature setting needed

Iron everything from silk to jeans without adjusting the temperature and no burns guaranteed\*. Thanks to OptimalTEMP, no dial or settings are needed. So there's no more pre-sorting the laundry, or waiting for the iron to heat up and cool down. You're ready for any fabric, anytime.


## Powerful steam

Strong, continuous steam for effective crease removal of even the most stubborn creases on the thickest fabrics.

## Light weight iron

The iron is amazingly light and comfortable to handle, gliding easily and reducing wrist strain. Its minimal weight of only 800g also makes it easy for vertical steaming of curtains and hanging clothes.

## SteamGlide Elite soleplate

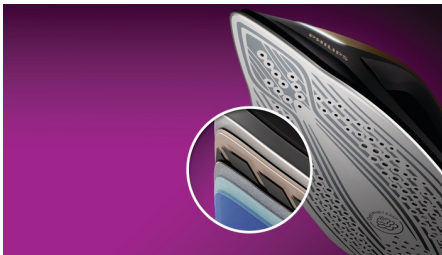

SteamGlide Elite is our best soleplate for ultimate gliding performance and maximum scratch resistance. Its stainless steel base is

twice as hard as a regular aluminum base, and our patented 6-layer coating with advanced titanium layer, glides effortlessly for the fastest results.

## 1.8L detachable water tank

The 1.8-liter transparent water tank gives you up to 2 hours of continuous use. When the water tank is empty, you will be reminded by the indicator light to refill at any time which you can easily do under the tap through the large filling door.

## Easy De-Calc

Regular descaling protects your iron, extends its lifetime and ensures the best steam performance. Our exclusive Easy De-Calc system collects limescale continuously with an indicator light to tell you when it needs emptying. Simply remove the plug and let the water and scale particles flow out.

## Auto-shut off

Auto-shut off to save energy and for peace of mind.

## Safety carry lock

Lock your iron securely to the base station for easy carrying around the house and to reduce the risk of accidentally touching the hot soleplate.

# Specifications

## Technology

OptimalTEMP technology

## Fast crease removal

Continuous steam rate: Up to 120 g/min

Pressure: Max 8.0 bar

Steam boost: Up to 600 g

Power: Max 2100 W

Voltage: 220 - 240 V

## Easy to use

Safe on all ironable fabrics

Soleplate: SteamGlide Elite

Water tank capacity: 1800 ml

Detachable water tank

Low water alert

Heat up time: 2 min

Refill any time during use

Tap water suitable

## Scale management

Descaling and cleaning: Easy De-calc Plus

Calc clean reminder: Light

## General specifications

Hose length: 1.7 m

Hose storage: Compartment

Power cord length: 1.65 m

Power cord storage: Velcro fix

Warranty: 2 years worldwide guarantee

Energy saving: 20%

## Size and weight

Packaging dimensions (WxHxL): 31.5 x 31.5 x 47.5 cm

Product dimensions (WxHxL): 24 x 27.5 x 42 cm

Total weight with packaging: 5.3 kg

Weight of iron: 0.8 kg

Weight of iron + base: 3.85 kg

