

Philips 3000 Series  
Steam iron

**2400 W power**  
40 g/min continuous steam  
200 g steam boost  
Ceramic

**DST3040/70**



## Powerful steam to tackle every crease

### Steamboost up to 200g

Our steam iron 3000 series makes ironing easy with the powerful steam boost that tackles tough creases. The ceramic soleplate ensures smooth gliding while the 300ml water tank is large enough to finish smaller ironing loads without a refill.

#### Fast ironing

- 2400 watt for fast heat-up
- Continuous steam up to 40g/min for consistent performance
- Steam boost up to 200 gram for extra power

#### Easy ironing

- Iron more in one go with the 300ml water tank
- Automatic shut-off
- Our drip stop prevents water dripping on your garment
- Reach difficult places easily with the triple precision tip
- Vertical steaming for hanging fabrics

#### Long lasting performance

- Built-in calc-clean slider, long-lasting steam performance

#### Easy ironing

- Smooth gliding ceramic soleplate

# PHILIPS

# Highlights

## Continuous steam up to 40g/min



Strong and consistent steam output to remove creases faster.

## Steam boost up to 200 gram




The strong steam boost gives you that extra power to penetrate deeper into the fabric and cut through the tough creases easily.

## Ceramic soleplate



Our durable ceramic soleplate glides well on any ironable garment. It does not stick to your garment, is scratch resistant and easy to keep clean.

## Auto shut-off

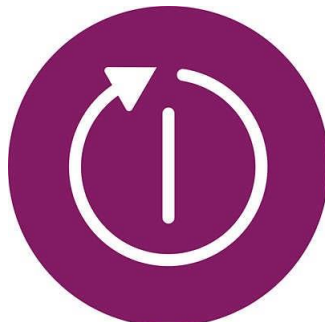

The iron shuts itself off if you leave it standing still. On its heel rest, it will automatically switch off in 8 minutes. Lying flat, it shuts down after 30 seconds motionless.

## Drip stop



Our drip-stop system prevents leakage to avoid stains from water droplets, so you can iron with confidence at any temperature.

## Vertical steam



With the vertical steam function you can refresh garments right on the hanger and remove creases from hanging fabrics such as curtains. No ironing board required.

## Triple precision tip



The tip is precise in 3 ways: it has a pointed tip, button groove and sleek nose design. Our triple precision tip helps you handle even the hardest-to-iron spots, like buttons and pleats.

## Built-in calc-clean slider



This iron operates with ordinary tap water. Calc-clean is a built-in cleaning function to remove calcium buildup, or limescale, and maintain peak performance.

## 300ml water tank



Fewer refills are required thanks to a large 300ml water tank. So you can iron more clothes in one go.

# Specifications

## Easy to use

- Water tank capacity: 300 ml
- Drip stop
- Tap water suitable
- Power cord length: 1.9 m
- Auto shut off
- Soleplate: Ceramic
- Vertical steam
- Voltage: 220-240 V
- Water spray

## Calc management

- Built-in Calc Clean Slider
- Descaling and cleaning

## Size and weight

- Weight of iron: 1.2 kg
- Packaging dimensions (WxHxL): 32x13x16.2 cm
- Product dimensions (WxHxL): 12.1x14.3x29 cm
- Total weight with packaging: 1.5 kg

## Green efficiency

- Energy saving mode
- Product packaging: 100% recyclable
- User manual: 100% recycled paper

## Powerful performance

- Continuous steam: 40 g/min
- Steam boost: Up to 200 gram
- Ready to use: 35 sec.
- Power: 2400 W

## Consumer Trade Item

- Height: 16.5
- Width: 13
- Length: 32
- Net Weight: 1.214
- Gross Weight: 1.409
- GTIN: 08720389001000
- Country of origin: CN
- Harmonized system code: 85164000

## Outer Carton

- Height: 35
- Width: 33
- Length: 41.5
- Net Weight: 7.284
- Gross Weight: 9.056
- GTIN: 18720389001007

## Guarantee

- 2 year worldwide guarantee



Issue date 2022-04-18

Version: 2.2.1

EAN: 08 72038 90010 00

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)