



**PHILIPS**

**AVENT**

DECT baby monitor

100% private, no interference

Crystal clear sound

Night light and lullabies



Product Picture

SCD710/05

## The most reliable connection to your baby

100% private, with zero interference

The crystal-clear sound of our SCD710 baby monitor provides complete reassurance for parents. With a temperature sensor, soothing night light and comforting lullabies, you can create a restful environment for your baby.

### Freedom and flexibility

- Excellent operating time for overnight monitoring
- Range up to 330 metres\*

### Reliable connection and constant reassurance

- DECT technology guarantees zero interference and 100% privacy
- Crystal clear sound thanks to DECT technology
- Know you are connected with LED alerts
- Energy-saving Smart ECO mode for minimal transmission
- Monitor the temperature in your baby's room and set alerts

### Soothing and sleep

- Comforting night light and lullabies to calm your little one
- Talk to your baby remotely

# Highlights

## 100% private, no interference



DECT technology provides a secure and private connection, so you can be sure that you are the only one listening in. It guarantees zero interference from any other transmitting devices, like other baby monitors, cordless phones and mobile phones.

## Crystal clear sound

DECT technology provides crystal clear sound, so you can hear every tiny giggle, gurgle and hiccup with perfect clarity.

## Smart ECO mode



The unique Smart ECO mode automatically minimises the audio transmission and increases your battery time. The closer you are to your baby, the less power is needed for a perfect connection.

## Range up to 330 metres\*




\*Indoor range up to 50 m, outdoor range up to 330 m.

## Excellent operating time



The convenient rechargeable parent unit will give you the freedom of cordless monitoring for up to 18 hours per charge.

## Know you are connected

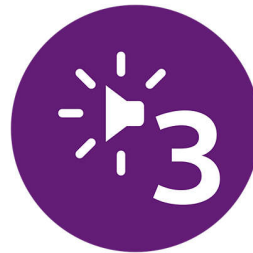

3 sound level lights indicate the level of sound in your baby's room even when the parent unit is muted. With the link indication, you always know when your monitor is in range and connected. The parent unit will alert you when your monitor is out of range or when the power is low, helping you to make sure that you are always connected to your baby.

## Night light and 5 lullabies




There is nothing like a gentle lullaby and the warm, tranquil glow of a night light to calm a restless baby. Play one of 5 relaxing tunes and switch on the night light from any room in the house. Help your baby to drift effortlessly back to sleep in no time.

## Talk to your baby remotely



Sometimes all your baby needs is the soothing sound of your voice. With one click, this essential feature allows you to talk to your baby from anywhere in the house.

## Temperature sensor and alerts

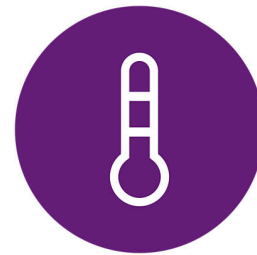

As babies are not yet able to regulate their body temperature as well as you can, a slight fluctuation in climate can make them restless. The temperature sensor allows you to monitor the climate in your baby's room and set a customised alert if the temperature changes.

# Specifications

## Included

Baby unit  
Batteries: 2x AA batteries  
Batteries for baby unit: No  
Belt clip  
Parent unit  
Power adapter: 2 x

## Transmission

Automatic channel selection  
Frequency band: DECT

## Convenience

Auto out-of-range warning  
Battery low indication  
Battery charging indication  
Sound-level lights

Adjustable volume  
Brightness control  
LCD screen  
Microphone sensitivity control

## Power

Power Supply: 120 V (US), 220–240 V  
Charging time (parent unit): Up to 10 hours  
Operating time (parent unit): Up to 18 hours

## Technical specifications

Operating temperature range: 0–40 °C

## Features

Battery back-up function baby unit  
Comforting night light  
DECT Technology

Indoor range up to: 50 m  
Energy-saving Smart ECO mode  
Outdoor range up to: 330 m  
Talkback function  
Temperature sensor  
Battery- and mains-operated parent unit  
Sound activation lights: 3 LED lights  
Soothing lullabies  
Know you are connected: Yes, with LED alerts

## Logistic data

F-box dimensions (W x H x D): 220 x 156 x 94 mm

