



Philips Genuine  
replacement filter  
NanoProtect HEPA

Compatible with: AC3256/60,  
AC3259/60.

Filters 99.97% of 0.003  $\mu$ m  
particles

**FY3433/10**

## Powerful protection for the best performance

### Genuine Philips filter that fits perfectly

The NanoProtect HEPA makes sure that you are protected from viruses, bacteria, pollen, dust, PM2.5 and pet dander.

#### **Superior performance**

- Philips filters ensure that your device works effectively
- Up to 99.9% virus removal

#### **Genuine Philips filter**

- Perfect fit for consistently high performance

#### **Superior performance**

- The NanoProtect HEPA filter cleans faster than H13 (4)

#### **Designed around you**

- Connect with the device and monitor it through the app

#### **Designed around you**

- Follow the Smart filter status indicator on your device

# PHILIPS

# Highlights

## The original Philips filter




Genuine Philips filter was designed together with the device itself to ensure a perfect fit, which guarantees the continuously smooth operation of the device.

## Quality you can trust



Philips air filters go through a set of mandatory and strict inspection tests before being released from the factory. They are subjected to rigorous life and durability tests for continuous operation 24/7. Our filters are designed to provide the best performance of your Philips purifier until the last day of the filter's lifespan.

## Superior performance

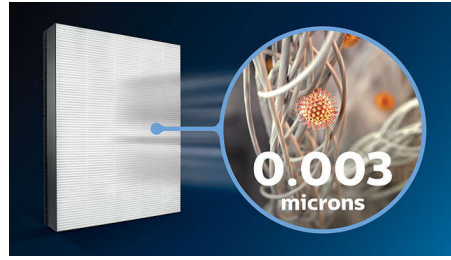

NanoProtect HEPA filter's low-resistance fibres maximise the airflow. The electrostatic charge attracts particles as small as 0.003 microns with 99.98% efficiency, enabling the filter to clean the air faster than the HEPA H13 filter, which is used for medical applications (4)

## Up to 99.9% virus removal




The purifier captures aerosols including those which may contain respiratory viruses. Tested independently to remove up to 99.9% of viruses and aerosols from the air. Also tested for coronavirus (8).

## Long-lasting performance




Philips NanoProtect HEPA filter provides consistent protection and guarantees optimal filtration for up to 2 years. (1)

## Effortless maintenance

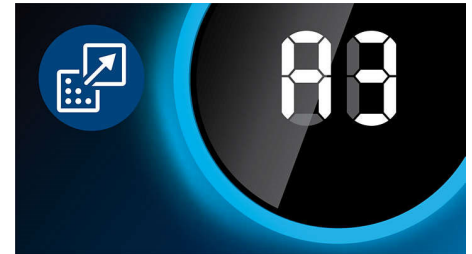

Your Philips device notifies you when to clean your pre-filter and when to replace the filter. This takes less than a minute. Maintenance of the device is effortless, ensuring that you always enjoy clean, healthy air.

## Track filter lifetime through

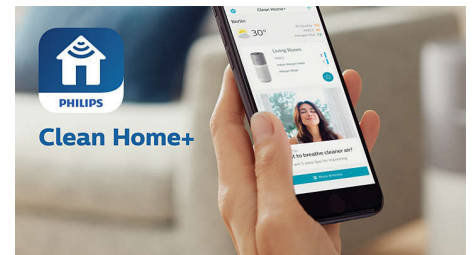

Monitor the lifetime and status of your filter anytime, anywhere with the CleanHome+ app (2). Receive an alert when it's time to change your filter and easily order a replacement directly through the app (3).

# Specifications

## Weight and dimensions

- Dimensions of product (LxWxH): 50\*290\*370 mm
- Dimension of packaging (L x W x H): 55\*295\*377 mm
- Weight of product: 1.42 kg
- Weight incl. packaging: 1.644 kg

## Design and finishing

- Colour(s): White, grey

## Replacement

- For Philips air purifier(s): AC4550, AC4558,

AC3256, AC3259

## Performance

- Particle filtration: 99.97% at 0.003 microns
- Allergen filtration: 99.99%
- Virus & aerosol filtration: 99.9%

## Maintenance

- Wash under water: No
- Clean with a brush: No
- Clean with chemical products: No



Issue date 2023-05-15

Version: 9.9.1

EAN: 87 10103 77136 4

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* (1) Recommended lifetime is calculated based on the Philips user's average usage time and the WHO urban outdoor pollution level data. Actual lifetime is impacted by usage environments and frequencies.

\* (2) Only applicable for selected models with connectivity

\* (3) Only applicable in those countries where the Philips shop is available

\* (4) NanoProtect HEPA filter material provides lower air flow resistance than the material from a HEPA H13 filter, enabling a Philips air purifier with NanoProtect to deliver a higher Clean Air Delivery Rate (CADR) than with an equivalently sized certified HEPA H13 filter.

\* (5) From the air that passes through the filter, tested with NaCl aerosol by iUTA according to DIN71460-1.

\* (6) Contingent on the filter being used with AC1711 or 1715 Philips purifier

\* (7) Microbial Reduction Rate Test conducted at Airmid Health group Ltd. tested in a 28.5m³ test chamber contaminated with airborne influenza A(H1N1).

\* (8) Microbial Reduction Rate Test at external lab, in a test chamber contaminated with avian coronavirus (IBV) aerosols, with Philips HEPA NanoProtect filter.