



Philips Performer Active
Bagged vacuum cleaner

99.9% dust pick-up

900 W
4L
Turbo brush



FC8578/09

Most powerful bagged vacuum cleaner by Philips

Locks >99.9%* of dust with 50% longer bag usage**

The Philips Performer vacuum cleaner delivers top cleaning performance with low energy consumption. Keep the air in your home clean and healthy too thanks to our Allergy Filter, which traps 99.9%+ of harmful particles.

Superior performance

- Revolutionary AirflowMax technology for strong suction power
- 99.9% dust pick-up* to deliver deep cleaning results
- Allergy Filter captures 99.9% of particles — ECARF certified
- TriActive+ nozzle to deliver high performance on all floors
- Turbo brush, perfect for (pet) hair and fluff cleaning
- 900 W motor for high suction power

Effortless cleaning

- ActiveLock couplings easily adjust to every task
- Easy long-lasting bags fit into large 4 litre dust chamber
- Soft brush integrated into handle, always ready to use

PHILIPS

Bagged vacuum cleaner
99.9% dust pick-up 900 W, 4L, Turbo brush

FC8578/09

Highlights

AirflowMax technology



Uniquely designed dust chamber maximises capacity and airflow with a non-clogging dust bag, which enables strong suction power right up until the dust bag is full.

High-efficiency 900 W motor




High-efficiency 900 W motor delivers high suction power for deep cleaning results.

99.9% dust pick-up*




TriActive+ nozzle and high suction power ensure that you can vacuum 99.9% of fine dust*.

Certified Allergy Filter

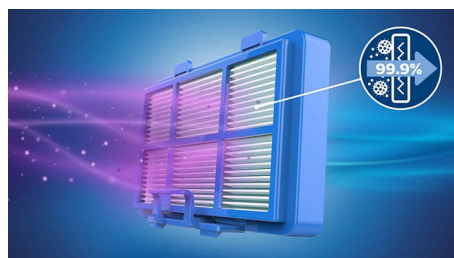

Certified allergy filter captures 99.9% of dust particles - including pollen, pet hair and dust mites - ideal for allergy sufferers.

Integrated brush

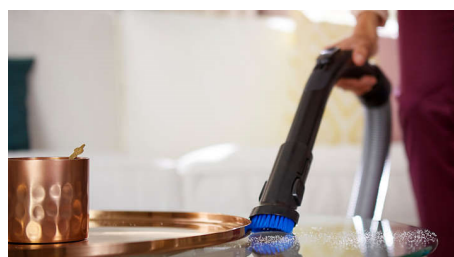

Dusting brush tool is built into the handle so it's always ready to use on furniture, flat surfaces and upholstery.

Long-lasting 4 L S-bags



Large 4 litre dust chamber and long-lasting universal bags allow optimum suction power until full, plus sealed, mess-free disposal.

TriActive+ nozzle



TriActive+ nozzle utilises 3 cleaning actions in one go. It features a larger opening at the front to suck up larger debris while the specially designed soleplate removes dust from deep within carpets. Air channels on both sides of the nozzle pick up any dust and dirt alongside walls or furniture.

ActiveLock couplings



ActiveLock couplings allow attachments to easily fit to the telescopic tube with a simple snap.

Turbo brush



The rotating Turbo brush is designed for optimal cleaning of pet hair and fluff, opening up carpet fibres for a deeper clean.

Specifications

Performance

- Input power (IEC): 650 W
- Airflow (max): 32.17 l/s
- Sound power level: 77 dB
- Vacuum (max): 17.5 kPa
- Input power (max): 900 W

Design

- Colour: Deep Black

Usability

- Tube coupling: ActiveLock
- Action radius: 9 m
- Carrying handle: Front
- Tube type: Metal 2-piece telescopic tube
- Power control: Rotary knob
- Cord length: 6 m
- Wheel type: Rubber

Nozzles and accessories

- Accessories included: Crevice tool, Integrated brush
- Standard nozzle: TriActive+ nozzle
- Additional nozzle: Hard floor nozzle, Turbo brush

Weight and dimensions

- Dimensions of product (LxWxH): 447 x 304 x 234 mm
- Weight of product: 5.2 kg

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Filtration

- Dust bag type: s-bag Classic Long Performance
- Dust capacity: 4 L
- Exhaust filter: Allergy filter
- Motor filter: Micro filter



Issue date 2023-04-13

Version: 2.2.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* 99.9% dust pick-up on hard floors with crevices (IEC62885-2).
Filtration performance is tested in accordance with DIN EN 60312/11/2008.

* *Calculated with a dust bag replacement at 80% of suction power loss, compared to the Classic paper bag FC8019/01; measured internally on a Philips FC895x/09 range.