



Philips PowerPro Compact  
Bagless vacuum cleaner

**1800 W**

PowerCyclone 5  
Allergy H13 filter



**FC9350/62**

## Higher suction power\* with PowerCyclone 5

### Compact, yet powerful

With the Philips Bagless Vacuum 3000 Series, compact design meets king-size performance. Enjoy thorough cleaning throughout your home thanks to PowerCyclone 5 technology and our MultiClean nozzle.

#### Superior performance

- 1800W durable motor for high suction power
- MultiClean nozzle for thorough cleaning on all floors
- PowerCyclone 5 maintains high performance for longer
- Allergy H13 filter system captures >99.9% of fine dust

#### Effortless cleaning

- Compact and lightweight for easy carrying
- Dust container designed for hygienic emptying with one hand
- Soft brush integrated into handle, always ready to use

#### Effortless cleaning

- ActiveLock couplings easily adjust to every task


**PHILIPS**

Bagless vacuum cleaner  
1800 W PowerCyclone 5, Allergy H13 filter

FC9350/62

# Highlights

## 1800W durable motor

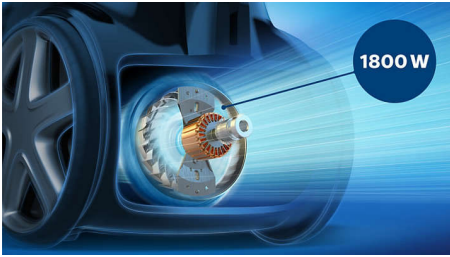


Durable 1800W motor generates up to 360W of high suction power for thorough cleaning results.

## Hygienic dust disposal




Easy-to-empty dust container is designed for hygienic disposal with one hand, to help minimize dust cloud.

## Allergy H13 filter

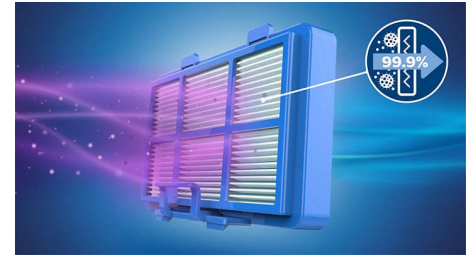

The fully-sealed filtration system captures >99.9% of fine dust particles - including pollen, pet hair and dust mites - for allergy sufferers and anyone demanding a higher level of hygiene. Filtration level is equivalent to HEPA 13\*\*.

## PowerCyclone 5 technology

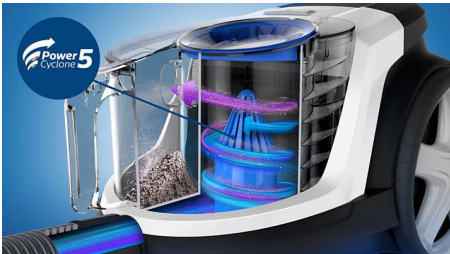

PowerCyclone 5 technology accelerates the air flow in the cylindrical chamber to separate dust from the air and maintain high performance and strong suction power for longer.

## Compact and lightweight



Compact and lightweight design ensure both storing and carrying the vacuum is easy.

## ActiveLock couplings




ActiveLock couplings allow attachments to easily fit to the telescopic tube with a simple snap.

## MultiClean nozzle



MultiClean nozzle is designed to seal closely to the floor to ensure thorough cleaning across all floor types.

## Integrated brush

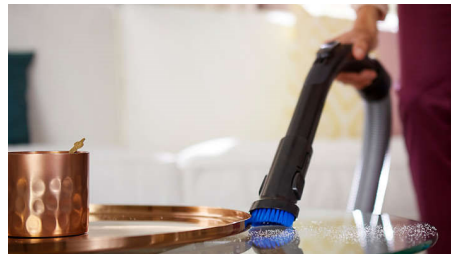

Dusting brush tool is built into the handle so it's always ready to use on furniture, flat surfaces and upholstery.

# Specifications

## Performance

- Input power (IEC): 1600 W
- Airflow (max): 37 l/s
- Sound power level: 82 dB
- Vacuum (max): 33 kPa
- Input power (max): 1800 W
- Suction power (max): 360 W

## Accessories

- Filter replacement kit: FC8010/02

## Design

- Color: Deep black

## Usability

- Tube coupling: ActiveLock
- Action radius: 9 m
- Carrying handle: Front
- Tube type: Metal 2-piece telescopic tube
- Cord length: 6 m
- Wheel type: Plastic

## Nozzles and accessories

- Accessories included: Crevice tool, Integrated brush
- Standard nozzle: MultiClean nozzle
- Accessory storage: On tubeclip

## Weight and dimensions

- Dimensions of product (LxWxH): 410 x 281 x 247 mm
- Dimensions of packaging (LxWxH): 525 x 320 x 315 mm
- Weight of product: 4.5 kg

## Sustainability

- Packaging: <gt;&gt; 90% recycled materials
- User manual: 100% recycled paper

## Filtration

- Dust capacity: 1.5 L
- Exhaust filter: Allergy H13 filter
- Motor filter: Washable filter
- Filtration level: HEPA13 level\*\*



Issue date 2023-04-14

Version: 1.1.2

EAN: 87 10103 97814 5

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Compared to PowerPro Compact FC8471/01

\*\* Filtration levels are tested according EN60312-1-2017 and are equivalent to HEPA 13.