

PHILIPS

Sonic electric toothbrushes
with app - White

DiamondClean 9000

Connected brushing made easy

Built-in pressure sensor

Smart brush head recognition

4 modes, 3 intensities



HX9914/55



Whiter, healthier teeth for life

Whiter teeth in just 1 day*

Philips Sonicare's best whitening in our most elegant sonic electric toothbrush. Switch to Philips Sonicare.

Enjoy a stylish and user-friendly design

- Simple to charge and style to boot

DiamondClean users experience improved oral health

- Hard on plaque, gentle on your gums
- Removes up to 10 x more plaque* for a deep clean

Let the DiamondClean 9000 adapt to your needs

- Personalised brushing experience
- Lets you know if you're pressing too hard
- BrushSync automatically selects the best mode for you
- Always know when to replace your brush heads

Stay on track with a personalised progress report

- Start and keep up healthy habits



asimpleswitch.com


Highlights

Removes up to 10 x more plaque*



Know you're getting the deepest possible clean with the C3 Premium Plaque Control brush head. The soft, flexible bristles are designed to curve around the contours of your teeth, giving you 4 x more surface contact** and up to 10 x more plaque removal from hard-to-reach spots.

Progress Report

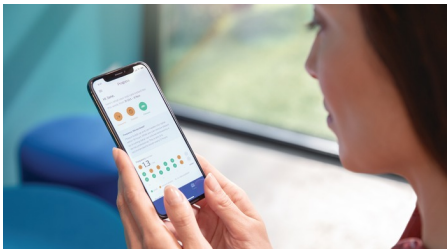

The DiamondClean 9000 gives you the guidance you need to improve and maintain healthy brushing habits in between dentist check-ups. Built-in smart sensors let you know when you're using too much pressure, and by connecting your brushing experience to the Sonicare app, a personalised Progress Report helps you stay on track and see how much you've improved over time.

4 modes, 3 intensities



DiamondClean 9000 comes with Clean, White+, Gum Health and Deep Clean+ to take care of your brushing needs. Clean mode is for exceptional everyday cleaning, White+ is for removing stains, Gum Health provides a gentle yet effective clean for gums and Deep Clean+

gives you an invigorating deep clean. Three intensities allow you to choose between a higher setting to boost your clean and a lower one for more sensitive mouths.

BrushSync mode pairing



Smart brush heads ensure you're using the right mode and intensity for the best possible clean. For example, let's say you're using the W3 Premium White brush head. Your DiamondClean 9000's BrushSync technology will automatically sync your brush head with the White+ mode to help whiten your teeth.

Built-in pressure sensor



You might not notice if you're brushing too hard, but your DiamondClean 9000 will. If you need to ease up, the toothbrush will make a pulsing sound. It's a reminder to let your brush head do the work. 7 out of 10 people found this feature helped them become a better brusher.

BrushSync replacement reminder



All brush heads wear out over time, so you'll want to keep an eye on yours to make sure you're still getting a great clean. Our BrushSync technology tracks how long you've

been using your brush head for and how hard you've been brushing. The BrushSync replacement reminder on your handle and a short beep remind you when it's time to replace it.

Long-life battery



Your DiamondClean 9000 will last for up to two weeks on a single charge with regular use.

C3 Premium Plaque Defence



The Premium Plaque Defence brush head is designed to give you your deepest clean yet. Soft flexible sides and bristles perfectly curve around the contours of your teeth, giving you 4 x more surface contact and helping target hard-to-reach spots*.



[asimpleswitch.com](https://www.asimpleswitch.com)

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas — Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Modes

3 intensities: High, Low, Medium

Clean: For exceptional everyday cleaning

Deep Clean+: For an invigorating deep clean

Gum Health: Special attention to molars

White+: To remove surface stains

Items included

Handle: 2 DiamondClean 9000

Brush heads: 2 C3 Premium Plaque Defence

Glass charger: 1

Charger base: 2

Connectivity

Bluetooth® wireless technology: Connected brushing app

Compatibility

Android compatibility: Android phones, Bluetooth 4.0-enabled tablets

iOS compatibility: iPad 3rd Gen or higher, iPhone 4S or higher, with iOS7 or higher, with iOS 7 operating system

Design and finishing

Colour: White

Cleaning performance

Performance: Removes up to 10 x more plaque*

Pressure feedback: Vibrates handle to alert user

Timer: BrushPacer and SmarTimer

Smart sensor technology

Pressure sensor: Alerts when brushing too hard

BrushSync Replacement Reminder: Always

know when to, replace brush heads

BrushSync Technology: smart brush head, Connects smart handle and

Ease of use

Handle compatibility: Easy click-on brush heads

Replacement reminder: To always ensure best results, reminder icon lights up

Handle: Slim ergonomic design

Technical specifications

Battery: Rechargeable

Battery type: Lithium ION

Operating time (full to empty): 14 days***

Power

Voltage: 110-220 V

Service

Warranty: 2-year limited warranty

