



Philips Series 3200
Fully automatic
espresso machines

- 5 Beverages
- LatteGo
- Silver
- Touch display

EP3246/70



5 delicious fresh bean coffees, easier than ever

LatteGo, the fastest to clean milk system ever*

Easily make aromatic coffee varieties like Espresso, Coffee, Cappuccino and Latte Macchiato at the touch of a button. LatteGo tops milk varieties with silky smooth froth, is easy to set up and can be cleaned in as little as 15 seconds*

A variety of coffees customized to your taste

- Silky smooth milk froth thanks to high speed LatteGo system
- Enjoy 5 coffees at your fingertips, including cappuccino
- Easily adjust to your taste with 12-step grinder levels
- Easy selection of your coffee with intuitive touch display
- Adjust aroma strength and quantity via My Coffee Choice

High quality coffee from fresh beans

- Keep your beans fresh for longer thanks to the aroma seal
- 20,000 cups of finest coffee with durable ceramic grinders
- The perfect temperature, aroma and crema cup after cup*

Effortless use and cleaning for everyday enjoyment

- Easy cleaning thanks to fully removable brew group
- Up to 5000 cups* without descaling thanks to AquaClean
- LatteGo is exceptionally easy to clean: 2 parts, no tubes
- Dishwasher safe parts for your convenience

PHILIPS

Fully automatic espresso machines
5 Beverages LatteGo, Silver, Touch display

Highlights

5 aromatic coffees



Enjoy your favourite coffees for your special moments. Whether you crave for an espresso, a coffee or a milk based recipe, your fully-automatic espresso machine delivers a perfect in-cup result with no hassle and in no time!

LatteGo milk system



Top your coffee off with a silky-smooth layer of milk froth. The LatteGo mixes milk and air at high speed in the round frothing chamber, then adds a splash-free, creamy layer of milk froth to your cup at just the right temperature.

Intuitive touch display



The irresistible taste and aroma of coffee from fresh beans is just one touch away. Our

intuitive touch display allows you to easily select your favorite coffee.

My Coffee Choice




Adjust the strength and quantity of your beverage with the My Coffee Choice menu. Easily choose from three different settings to suit your preferences.

12-step grinder adjustment



Our durable ceramic grinders can be adjusted in 12 steps, so you can turn your beans into anything from ultra-fine powder to coarse grindings.

Perfect temperature and aroma

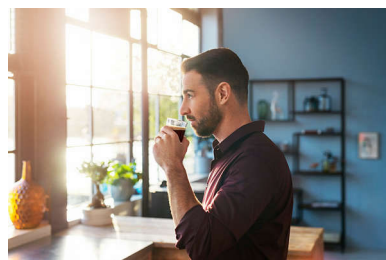

The Aroma Extract system intelligently strikes the optimum balance between brewing temperature and aroma extraction by keeping

EP3246/70

the water temperature between 90 and 98°C, while regulating the water flow rate, so you can enjoy delicious coffees.

100% ceramic grinders



Our grinders are 100% pure ceramic: extremely hard and precise, so you can enjoy fresh aromatic coffee, for at least 20.000 cups.

2 parts, no tubes milk system



Our 2 parts milk system has no tubes or hidden parts and can be cleaned in as little as 15 seconds under tap* or in the dishwasher.

AquaClean filter



By changing the filter after being prompted by the machine, you will not need to descale your machine for up to 5000 cups*, while enjoying clear and purified water.

Specifications

Country of origin

- Designed in: Italy
- Made in: Romania

Technical specifications

- Voltage: 230 V
- Cord length: 100 cm
- Frequency: 50 Hz
- Capacity milk carafe: 0.26 L
- Capacity waste container: 12 servings
- Capacity water tank: 1.8 L
- Weight of product: 8 kg
- Coffee bean capacity: 275 g
- Waste container: Frontal access
- Water tank: Frontal access
- Filter compatibility: AquaClean
- Pump pressure: 15 bar
- Color & Finishing: Black, Silver Paint
- Product dimensions: 246x371x433 mm

General specifications

- Adjustable spout height: 85-145 mm
- Milk Solution: LatteGo
- Ease of cleaning & maintenance: AquaClean filter compatible
- Dishwasher safe parts: Drip tray, LatteGo
- User Interface: Touch screen display

Accessories

- Included: Measuring scoop, Water hardness strip test, AquaClean filter, Grease Tube, LatteGo

storage lid

Customization

- Aroma Strength Settings: 3
- Coffee and Milk Length: Adjustable
- Grinder Settings: 12
- Pre Brew Aroma control
- Temperature settings: 3

Variety

- Beverages: Espresso, Hot water, Cappuccino, Coffee, Latte Macchiato, Americano
- Coffee Powder Option
- Double Cup
- Milk Double Cup: No

Other features

- Removable brew group
- Aroma Seal
- Guided descaling
- AquaClean

Service

- 2-year guarantee

Sustainability

- ECO setting
- Energy label: A-class
- Power consumption brewing: 230 W
- Recyclable packaging material: >95 %



Issue date 2021-10-10

Version: 2.2.1

© 2021 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Based on 8 filters replacement as indicated by the machine. Actual number of cups depends on selected coffee varieties, rinsing and cleaning patterns.

* Based on consumer testing in Germany comparing leading one touch (Coffee + Milk) Full Automatic Espresso Machines (2017)

* based on 70-82 °C