



Philips Series 3200
Fully automatic
espresso machines

- 5 Beverages
- LatteGo
- Silver
- Touch display

EP3246/70



5 delicious fresh bean coffees, easier than ever

LatteGo, the fastest to clean milk system ever*

Easily make aromatic coffee varieties like Espresso, Coffee, Cappuccino and Latte Macchiato at the touch of a button. LatteGo tops milk varieties with silky smooth froth, is easy to set up and can be cleaned in as little as 15 seconds*

A variety of coffees customized to your taste

- Silky-smooth cappuccino; freshly brewed by yourself at home.
- Enjoy 5 coffees at your fingertips, including cappuccino
- Easily adjust to your taste with 12-step grinder levels
- Adjust aroma strength and quantity via My Coffee Choice
- Easy selection of your coffee with intuitive touch display

High quality coffee from fresh beans

- Keep your beans fresh for longer thanks to the aroma seal
- 20,000 cups of finest coffee with durable ceramic grinders
- The perfect temperature, aroma and crema cup after cup**

Effortless use and cleaning for everyday enjoyment

- Easy cleaning thanks to fully removable brew group
- Up to 5000 cups*** without descaling thanks to AquaClean
- LatteGo is exceptionally easy to clean: 2 parts, no tubes
- Dishwasher safe parts for your convenience

PHILIPS

Fully automatic espresso machines
5 Beverages LatteGo, Silver, Touch display

EP3246/70

Highlights

LatteGo milk system



Enjoy silky-smooth cappuccino, even with your favourite plant-based milk alternatives. Thanks to the cyclonic frothing technology, LatteGo transforms various types of milk and plant-based alternatives with the right amount of fat and protein into the best possible dense layer of foam.

5 aromatic coffees



Enjoy your favourite coffees for your special moments. Whether you crave for an espresso, a coffee or a milk based recipe, your fully-automatic espresso machine delivers a perfect in-cup result with no hassle and in no time!

Intuitive touch display



The irresistible taste and aroma of coffee from fresh beans is just one touch away. Our

intuitive touch display allows you to easily select your favorite coffee.

My Coffee Choice




Adjust the strength and quantity of your beverage with the My Coffee Choice menu. Easily choose from three different settings to suit your preferences.

12-step grinder adjustment



Our durable ceramic grinders can be adjusted in 12 steps, so you can turn your beans into anything from ultra-fine powder to coarse grindings.

Perfect temperature and aroma

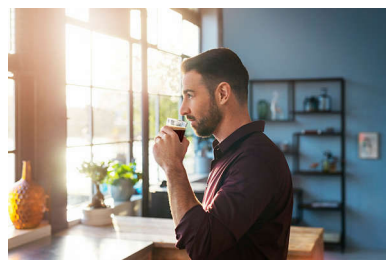

The Aroma Extract system intelligently strikes the optimum balance between brewing temperature and aroma extraction by keeping the water temperature between 90 and 98°C,


while regulating the water flow rate, so you can enjoy delicious coffees.

100% ceramic grinders



Bring out the full flavor of your coffee with our hard-wearing ceramic grinder. Our sharp-edged grinders extract the best aroma and flavour from your beans. Made from 100% ceramic material which ensures they last for at least 20.000 cups.

2 parts, no tubes milk system

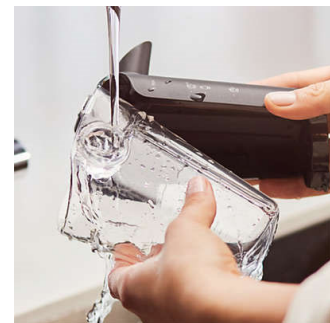

Our 2 parts milk system has no tubes or hidden parts and can be cleaned in as little as 15 seconds under tap* or in the dishwasher.

AquaClean filter



By changing the filter after being prompted by the machine, you will not need to descale your machine for up to 5000 cups***, while enjoying clear and purified water.

Specifications

Country of origin

- Designed in: Italy
- Made in: Romania

Customization

- Aroma Strength Settings: 3
- Coffee and Milk Length: Adjustable
- Grinder Settings: 12
- Pre Brew Aroma control
- Temperature settings: 3

Variety

- Beverages: Espresso, Hot water, Cappuccino, Coffee, Latte Macchiato, Americano
- Coffee Powder Option
- Double Cup
- Milk Double Cup: No

Other features

- Removable brew group
- Aroma Seal
- Guided descaling
- AquaClean

Accessories

- Included: Measuring scoop, Water hardness strip test, AquaClean filter, Grease Tube, LatteGo storage lid

Technical specifications

- Cord length: 100 cm
- Voltage: 230 V
- Frequency: 50 Hz
- Capacity milk carafe: 0.26 L
- Capacity water tank: 1.8 L
- Capacity waste container: 12 servings
- Coffee bean capacity: 275 g

- Weight of product: 8 kg
- Waste container: Frontal access
- Water tank: Frontal access
- Filter compatibility: AquaClean
- Pump pressure: 15 bar
- Color & Finishing: Black, Silver Paint
- Product dimensions: 246x371x433 mm

Consumer Trade Item

- Height: 48
- Width: 63
- Length: 49
- Net Weight: 10.55
- Gross Weight: 11.85
- GTIN: 8720389012952
- Country of origin: RO
- Harmonized system code: 85167100

Outer Carton

- GTIN: 18720389011525

General specifications

- Milk Solution: LatteGo
- Adjustable spout height: 85-145 mm
- Dishwasher safe parts: Drip tray, LatteGo
- Ease of cleaning & maintenance: AquaClean filter compatible
- User Interface: Touch screen display

Service

- 2-year guarantee

Sustainability

- ECO setting
- Energy label: A-class
- Power consumption brewing: 1500 W
- Recyclable packaging material: >95 %



Issue date 2023-07-17

Version: 5.5.1

EAN: 87 20389 01295 2

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Based on 8 filters replacement as indicated by the machine. Actual number of cups depends on selected coffee varieties, rinsing and cleaning patterns.

* Based on consumer testing in Germany comparing leading one touch (Coffee + Milk) Full Automatic Espresso Machines (2017)

* based on 70-82 °C