

Philips Series 3200  
Fully automatic  
espresso machines

- 5 Beverages
- LatteGo
- Silver
- Touch display

EP3246



## 5 delicious fresh bean coffees, easier than ever

LatteGo, the fastest to clean milk system ever\*

Easily make aromatic coffee varieties like Espresso, Coffee, Cappuccino and Latte Macchiato at the touch of a button. LatteGo tops milk varieties with silky smooth froth, is easy to set up and can be cleaned in as little as 15 seconds\*

### **A variety of coffees customized to your taste**

- Silky smooth milk froth thanks to high speed LatteGo system
- Enjoy 5 coffees at your fingertips, including cappuccino
- Easily adjust to your taste with 12-step grinder levels
- Adjust aroma strength and quantity via My Coffee Choice
- Easy selection of your coffee with intuitive touch display

### **High quality coffee from fresh beans**

- Keep your beans fresh for longer thanks to the aroma seal
- 20,000 cups of finest coffee with durable ceramic grinders
- The perfect temperature, aroma and crema cup after cup\*\*

### **Effortless use and cleaning for everyday enjoyment**

- Easy cleaning thanks to fully removable brew group
- Up to 5000 cups\*\*\* without descaling thanks to AquaClean
- LatteGo is exceptionally easy to clean: 2 parts, no tubes
- Dishwasher safe parts for your convenience

# PHILIPS

# Highlights

## 5 aromatic coffees



Enjoy your favourite coffees for your special moments. Whether you crave for an espresso, a coffee or a milk based recipe, your fully-automatic espresso machine delivers a perfect in-cup result with no hassle and in no time!

## LatteGo milk system



Top your coffee off with a silky-smooth layer of milk froth. By using cyclonic frothing technology, LatteGo releases a powerful stream of microbubbles at a speed of 394 metres per second, creating a rich and dense milk foam.

## Intuitive touch display

The irresistible taste and aroma of coffee from fresh beans is just one touch away. Our intuitive touch display allows you to easily select your favorite coffee.

## My Coffee Choice

Adjust the strength and quantity of your beverage with the My Coffee Choice menu. Easily choose from three different settings to suit your preferences.

## 12-step grinder adjustment



Our durable ceramic grinders can be adjusted in 12 steps, so you can turn your beans into anything from ultra-fine powder to coarse grindings.

## Perfect temperature and aroma



The Aroma Extract system intelligently strikes the optimum balance between brewing temperature and aroma extraction by keeping the water temperature between 90 and 98°C, while regulating the water flow rate, so you can enjoy delicious coffees.


## 100% ceramic grinders



Bring out the full flavor of your coffee with our hard-wearing ceramic grinder. Our sharp-edged

grinders extract the best aroma and flavour from your beans. Made from 100% ceramic material which ensures they last for at least 20.000 cups.

## 2 parts, no tubes milk system

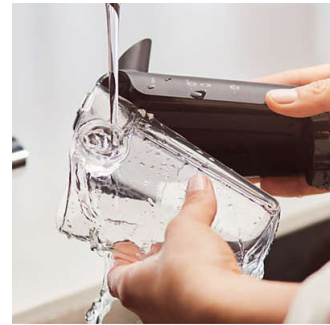

Our 2 parts milk system has no tubes or hidden parts and can be cleaned in as little as 15 seconds under tap\* or in the dishwasher.

## AquaClean filter



By changing the filter after being prompted by the machine, you will not need to descale your machine for up to 5000 cups\*\*\*, while enjoying clear and purified water.

# Specifications

## Country of origin

- Designed in: Italy
- Made in: Romania

## Customization

- Aroma Strength Settings: 3
- Grinder Settings: 12
- Coffee and Milk Length: Adjustable
- Pre Brew Aroma control
- Temperature settings: 3

## Variety

- Beverages: Espresso, Hot water, Cappuccino, Coffee, Latte Macchiato, Americano
- Coffee Powder Option
- Double Cup
- Milk Double Cup: No

## Other features

- Removable brew group
- Aroma Seal
- Guided descaling
- AquaClean

## Accessories

- Included: AquaClean filter, Grease tube, Measuring scoop, Water hardness test strip, LatteGo storage lid

## Technical specifications

- Voltage: 120 V

- Cord length: 100 cm
- Frequency: 60 Hz
- Capacity milk carafe: 0.26 L
- Capacity water tank: 1.8 L
- Capacity waste container: 12 servings
- Coffee bean capacity: 275 g
- Weight of product: 8 kg
- Waste container: Frontal access
- Water tank: Frontal access
- Filter compatibility: AquaClean
- Pump pressure: 15 bar
- Color & Finishing: Black, Silver Paint
- Product dimensions: 246x371x433 mm

## General specifications

- Adjustable spout height: 85-145 mm
- Milk Solution: LatteGo
- Ease of cleaning & maintenance: AquaClean filter compatible
- Dishwasher safe parts: Drip tray, LatteGo
- User Interface: Touch screen display

## Service

- 2-year guarantee

## Sustainability

- ECO setting
- Energy label: A-class
- Power consumption brewing: 1500 W
- Recyclable packaging material: >95 %



Issue date 2023-04-20

Version: 3.3.1

EAN: 00 75020 08622 8

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Based on consumer testing in Germany comparing leading One touch (Coffee + Milk) Full Automatic Espresso Machines (2018).

\*\*Based on 70-82 °C.

\*\*\*Based on 8 filters replacement as indicated by the machine. Actual number of cups depends on selected coffee varieties, rinsing and cleaning patterns.