



Philips 3000 Series
Blender

ProBlend system

2L Maximum Capacity
1.25L Effective Capacity
2 Speed settings + pulse

HR2291/20

Smooth blends with no lumps in 45 seconds*

Unique ProBlend system

Designed to improve your everyday blending, with the 600W power and blade performance you need to take on all your ingredients and even crush ice. Delivering a smooth consistency with minimal effort and in no time at all.

Built to last

- MTP sensor prevents motor overheating
- Ergonomic and robust design for ease of use
- Suction feet for no vibrations during use
- 2-year warranty

Built to last

- Durable stainless steel blades

Everyday versatility

- 1 speed + Pulse settings to choose from
- Large jar perfectly sized for your family's needs

Everyday versatility

- Specially designed to process different ingredients

Improved performance

- Unique ProBlend system ensures smooth consistency


PHILIPS

Blender

ProBlend system 2L Maximum Capacity, 1.25L Effective Capacity, 2 Speed settings + pulse


Highlights

ProBlend+ system

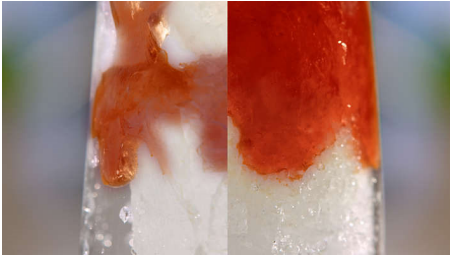

Unique ProBlend system perfectly combines 3 technologies, custom-designed to ensure smooth blending with no lumps in just 45 seconds*. The 600W power motor drives the blending flow to circulate all your ingredients evenly, while the innovative blade design is specially shaped to maximize the cutting area. Last but not least, the jar is designed with unique ribs to continuously guide ingredients back into the blending flow.

Ice crushing

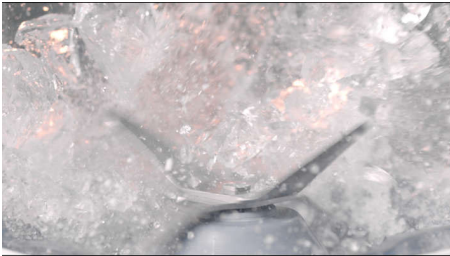

Use the ProBlend system plus the Pulse setting to crush ice cubes into fine pieces in just 45 seconds**. Perfect for your favorite chilled drinks and smoothies, and great for special desserts.

Speed settings

Produce a wide range of drinks and enable fast ingredient preparation for your favorite meals with 1 speed and Pulse settings to choose from. Use for ingredients from herbs, spices and veggies, to

grinding coffee, and even crushing ice to make a delicious chilled smoothie.

1.9L family size jar

Serves up to 5 drinks (based on 200ml glass size) thanks to 1L effective capacity.**

Motor Thermo Protection sensor

Special Motor Thermo Protection (MTP) sensor is designed to prevent the motor from overheating and protects from over-current condition during use.

Considered design

The design has been carefully considered to be both ergonomic and robust, while also being modern and stylish, sized to fit in all types of kitchen. The jar shape is comfortable to grip and the rotary knob enables easy operation.

Stainless steel blades



Durable stainless steel blades stay sharp and free from rust or tarnishing for longer.

Anti-vibrate feet

The blender features suction feet for stability and to ensure it doesn't vibrate during use.

Warranty

For additional peace of mind, the blender comes with a 2-year warranty.

Chopper accessory

Switch to the Chopper accessory when cutting ingredients like onions, garlic, peppers and meat, helps to finish your meal prep faster.

HR2291/20

Specifications

Country of origin

- Made in: China

Technical specifications

- Cord length: 0.85 m
- Power: 600 W
- Effective capacity: 1.25 L
- Max Jar Capacity: 2 l

Design

- Color: White

Weight and dimensions

- Dimensions of product (LxWxH): 168x192x381 mm

General specifications

- Dishwasher safe
- Product features: Problend technology with 4 star stainless steel blade, Durability: Motor Thermo protection sensor, Easy to clean: Dishwasher safe, Jar size: 2L maximum capacity, Jar size: 1.25L effective capacity, Speed settings: 2 speed+pulse, Easy to clean: Detachable blade, Easy to store: Integrated power and cord storage, Doesn't vibrate: Suction feet, Jar material: Glass jar, Accessories: chopper
- Speed UI: Rotary Knob

Finishing

- Body material: Plastic and stainless steel
- Jar material: Glass
- Knives material: Stainless steel

Service

- Warranty: 2 years global warranty



Issue date 2023-11-22

Version: 9.9.1

EAN: 87 20389 00187 1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com

** Tested in MAX mode on various recipes
*** if considered a glass of 200ml